


# **Parts Manual for** **SNAPPER®**

**GEAR & HYDRO DRIVE MODELS:**  
**LT120G30BB, LT125G33BB, ELT125G33BB**  
**LT140H33BBV, ELT140H33BBV**  
**LT140H38BBV**  
**LT150H38BBV**  
**LT155H42BBV**  
**SERIES "B"**  
**LAWN**  
**TRACTORS**

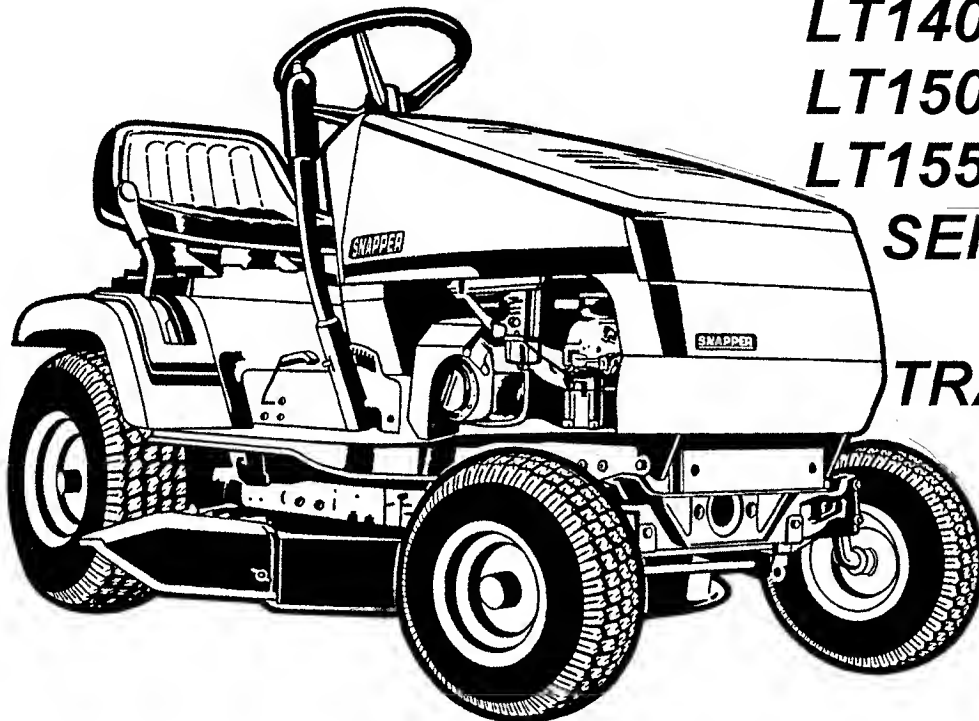

IT IS THE POLICY OF SNAPPER TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

**SNAPPER®** McDonough, GA., 30253 U.S.A.

# CONTENTS

<b>PAGE</b>	<b>GROUP</b>
4, 5	HOOD, BUMPER, HEADLIGHTS & COMPONENTS
6, 7	STEERING WHEEL, CONSOLE, FUEL TANK
8, 9	SEAT, REAR FENDER & COMPONENTS
10, 11	FRONT AXLE & FRONT WHEEL PARTS
12, 13	TRANSMISSION GROUP (Hydro Drive) & REAR WHEELS
14, 15	TRANSMISSION GROUP (Gear Drive) & REAR WHEELS
16, 17	FRAME, CLUTCH, BRAKE & STEERING COMPONENTS
18, 19	BLADE ENGAGEMENT & TRANSMISSION CONTROLS
20, 21	30" CUTTING DECK, BELTS, BRAKES
22	SPINDLE - 30" CUTTING DECK
23	ELECTRICAL COMPONENTS
24, 25	33" CUTTING DECK, BELTS, BRAKES
26, 27	38" CUTTING DECK, BELTS, BRAKES
28	SPINDLE - 38" CUTTING DECK
29	IMPLEMENT LIFT PARTS
30, 31	42" CUTTING DECK (Belt, Blade Brake Shown On Page 32)
32	BELT, BLADE BRAKE - 42" CUTTING DECK
33	SPINDLE ASSEMBLY - 42" CUTTING DECK
34, 35	ENGINE COMPONENTS
36	ELECTRICAL - Brigg's & Stratton Engines (14, 15, & 15.5 HP)
37	ELECTRICAL - Brigg's & Stratton Engines (12 & 12.5 HP)


## **ALWAYS USE “GENUINE” SNAPPER PARTS...**

*To Our Dealer's:*

*As a professional, you take pride in your business. You have the skill and the expertise to perform the latest technology in the repair of high quality lawn cutting equipment. You recognize the importance of keeping abreast of the ever-changing advancements in lawn cutting technology. A SNAPPER Lawn Tractor proves its worth over years of big, tough jobs. SNAPPER builds the same superb quality in all of their products, from mowers to tillers. SNAPPER has a long-term commitment to providing customer satisfaction by building equipment that reflects the highest standards of manufacturing excellence and by offering quality service and parts to keep them operating at peak performance. Gaining customer loyalty and repeat business is accomplished by your dedication to providing “Superior Service”.*

**NO ONE DESERVES ANYTHING LESS THAN THE EFFICIENCY AND  
DURABILITY OF A SNAPPER...**

# HOOD, BUMPER, HEADLIGHTS & COMPONENTS

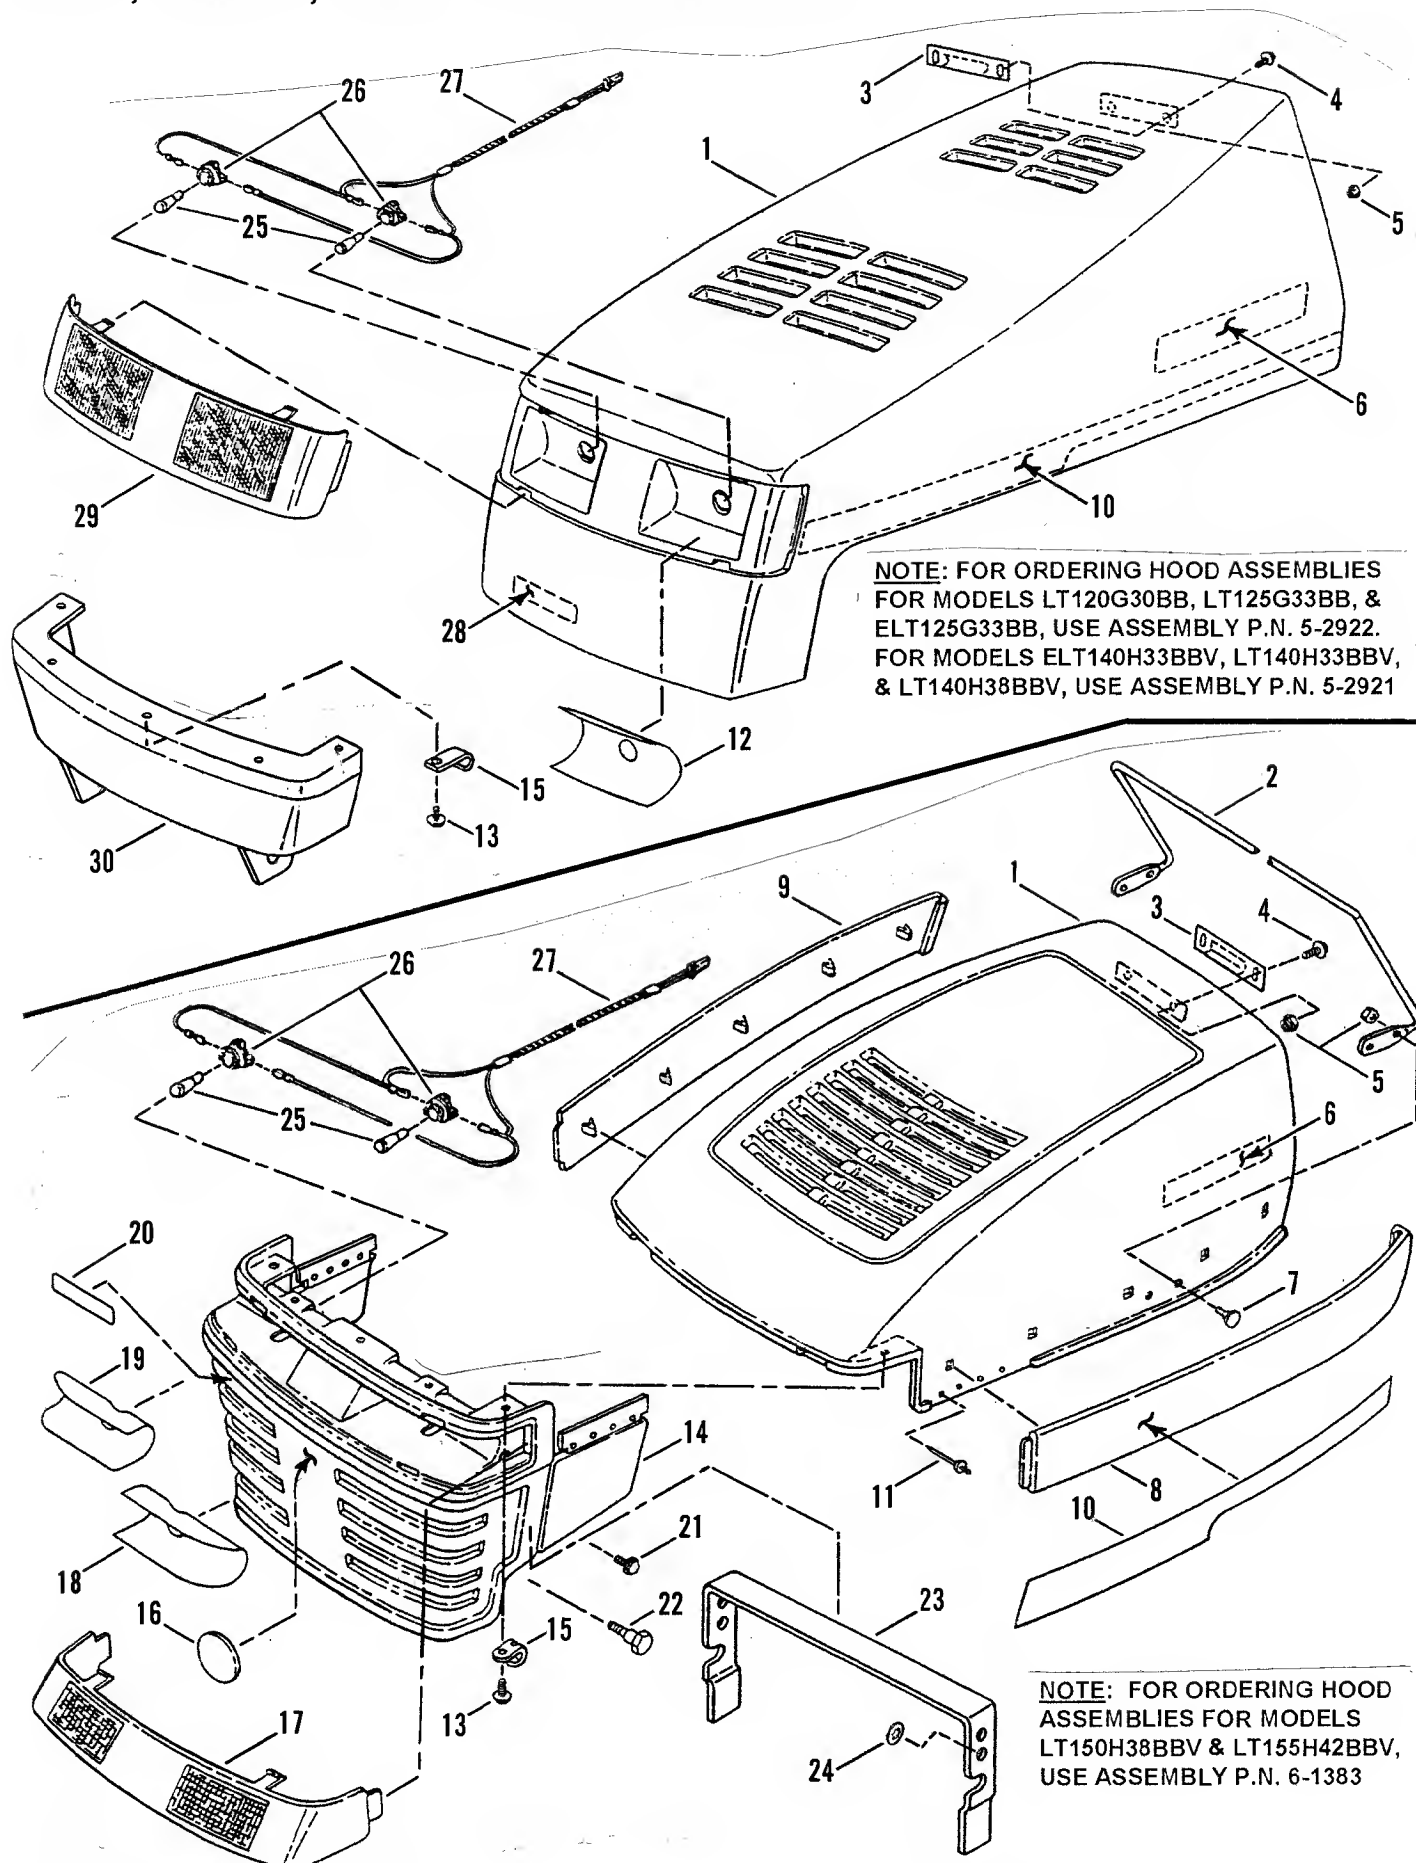


## HOOD, BUMPER, HEADLIGHTS & COMPONENTS

ITEM	PART NO.	DESCRIPTION
1	2-4605	HOOD, (30", 33", & ELT33" Gear Drive Models) (ELT 33" & 38" Hydro Drive Models) (1995)
--	2-4471	(30", 33", & ELT33" Gear Drive Models) (38" Hydro Drive Models) (1996) HOOD, Mozart (LT150H38BBV & LT155H42BBV Hydro Drive Models) (Model Year 1995) (LT150H38BBV, LT155H42BBV & ELT140H33BBV Hydro Drive Models) (Model Year 1996)
2	1-6766	ROD, Hood Support
3	2-4718	LATCH, Spring
4	9-0999	SCREW, 1/4-20 x 5/8" Truss Head, Torx (2)
5	7-6978	NUT, 1/4-20 Hex Nyloc (6)
6A	2-4903	DECAL - SNAPPER, 8" Molded Logo, White Letters (Gear Dr. Mdls. LT120G30BB, LT125G33BB, & ELT125G33BB)
--	1-6974	DECAL - SNAPPER, 8" Molded Logo, Silver Letters (Hydro Dr. Mdls. ELT140H33BBV, LT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV)
6B	2-6228	LOGO - BLACKHAWK (Models BH140H33BBV & BH140H38BBV) (2)
7	9-0803	BOLT, 1/4-20 x 5/8" Flat Head Carriage (4)
8	2-9572	PANEL, Hood (Left Hand) (Black)
9	2-9571	PANEL, Hood (Right Hand) (Black)
10A	2-7840	DECAL, Hood (Right Hand) (Model ELT140H33BBV & LT140H33BBV) (Hydro Drive)
--	2-7841	DECAL, Hood (Left Hand) (Model ELT140H33BBV & LT140H33BBV) (Hydro Drive)
--	2-7832	DECAL, Hood (Right Hand) (Model LT140H38BBV) (Hydro Drive)
--	2-7833	DECAL, Hood (Left Hand) (Model LT140H38BBV) (Hydro Drive)
--	2-9585	DECAL, Hood (Right Hand) (Model LT150H38BBV) (Hydro Drive)
--	2-9586	DECAL, Hood (Left Hand) (Model LT150H38BBV) (Hydro Drive)
--	2-9587	DECAL, Hood (Right Hand) (Model LT155H42BBV) (Hydro Drive)
--	2-9588	DECAL, Hood (Left Hand) (Model LT155H42BBV) (Hydro Drive)
--	2-7824	DECAL, Hood (Right Hand) (Model LT120G30BB) (Gear Drive)
--	2-7825	DECAL, Hood (Left Hand) (Model LT120G30BB) (Gear Drive)
--	2-7826	DECAL, Hood (Right Hand) (Models LT125G33BB & ELT125G33BB) (Gear Drive)
--	2-7827	DECAL, Hood (Left Hand) (Models LT125G33BB & ELT125G33BB) (Gear Drive)
10B	2-6706	DECAL, Hood (Right Side) (Models BH140H33BBV & BH140H38BBV)
--	2-6707	DECAL, Hood (Left Side Shown) (Models BH140H33BBV & BH140H38BBV)
11	9-1095	RIVET, 1/8" Pop (8)
12	1-7175	DECAL, Clear Lens (Left Hand)
--	1-7174	DECAL, Clear Lens (Right Hand)
13	9-1106	SCREW, M4.8 x 1.59 x 16.00MM, Special (5)
14	2-9570	GRILLE, Hood
15	2-6482	CLIP, "J"
16	7-1544	DECAL, Molded Medallion (Hydro Models Only!)
17	2-9602	LENS, Grille (Headlights)
18	2-6180	DECAL, Reflect (Left Hand)
19	2-6179	DECAL, Reflect (Right Hand)
20	2-2968	DECAL - SNAPPER, 4" Molded Logo (Silver Letters - Blue Stripe) (Hydro Mdls. Only!)
21	9-0858	SCREW, 5/16-18 x 1/2" Self-Tapping (4)
22	2-4061	BOLT, Shoulder, 3/8-16 x 1 1/4" Hex Socket, Torx (2)
23	3-4324	BRACE, Hood Support
24	1-1791	RETAINER, Bolt
25	2-6172	BULB, Headlights (2)
26	2-4709	SOCKET, Headlight Bulb (2)
27	2-6171	HARNESS, Headlight Wiring
28	2-4904	DECAL - SNAPPER, 4" Molded Logo (White Letters & Stripe) (Gear Drive Mdls. Only!)
29	2-4892	LENS, Solid Black (Models without Headlights)
--	2-4893	LENS, Clear (Models with Headlights)
30	2-9620	BUMPER, Front Hood Support

# STEERING WHEEL, CONSOLE, FUEL TANK

## ① ASSEMBLY

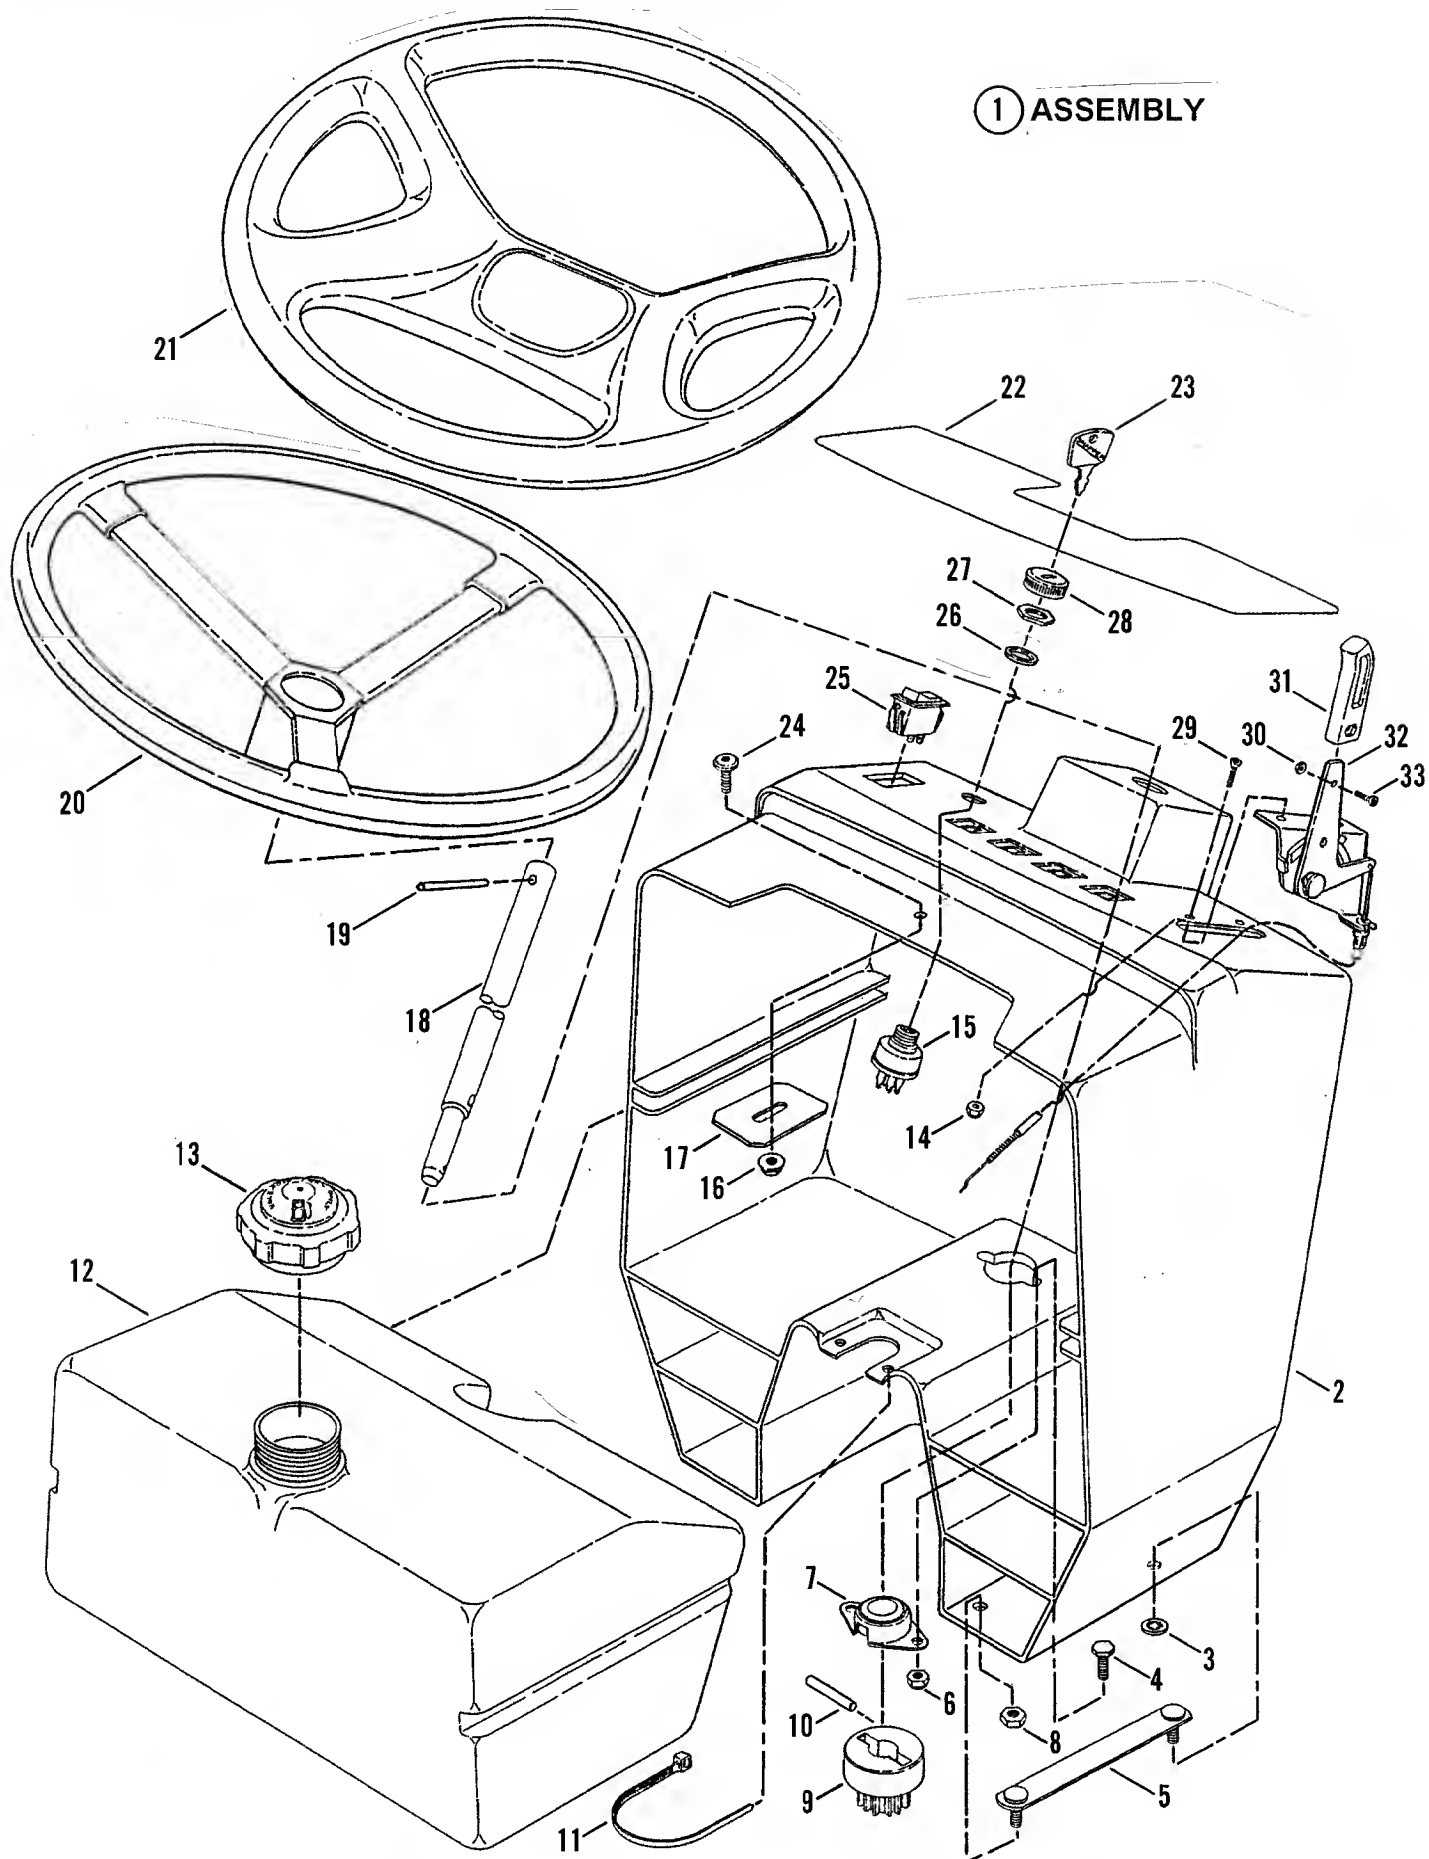


# STEERING WHEEL, CONSOLE, FUEL TANK

ITEM	PART NO.	DESCRIPTION
1	5-2825	ASSEMBLY, Console (Includes items 2 thru 7)
2	2-4376	CONSOLE
3	1-1791	RETAINER (4)
4	9-1495	SCREW, 1/4-20 x 3/4" Hex Head Cap, Grade 5 (2)
5	5-2891	ASSEMBLY, Strap-Clinch Stud (2)
6	7-6978	NUT, 1/4-20 Hex Nyloc (2)
7	2-6196	ASSEMBLY, Flange Bearing
8	9-1575	NUT, 5/16-18 Hex Center Lock (4)
9	2-2368	GEAR, Pinion, Steering Shaft
10	2-2369	PIN, Dowel, 1/4 x 1 1/4"
11	2-4641	TIE, Wire
12	5-2907	ASSEMBLY, Fuel Tank (Includes item 13)
13	1-4363	CAP, Fuel Tank
14	9-1599	NUT, #10-24 Hex Nyloc (2)
15	1-8562	KEYSWITCH (Includes item 27) (Gear Drive Models)
--	2-6343	KEYSWITCH (Includes item 27) (Hydro Drive Models)
16	9-0951	NUT, 5/16-18 Hex Flange Lock
17	3-3883	BRACKET, Hood Latch Catch
18	2-2380	SHAFT, Steering
19	1-2765	ROLL-PIN
20	2-7865	STEERING WHEEL (Models LT120G30BB, LT125G33BB, & ELT125G33BB) (Gear Drive) (Model Year 1995)
--	2-8622	STEERING WHEEL (Models LT120G30BB, LT125G33BB, & ELT125G33BB) (Gear Drive) (Model Year 1996)
21	2-9595	STEERING WHEEL (Models ELT140H33BBV, LT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV) (Hydro Drive)
--	2-2388	STEERING WHEEL (Not Shown) (Models BH140H33BBV & BH140H38BBV) (Hydro Drive)
22	2-4627	DECAL, Console (Models LT120G30BB, LT125G33BB, & ELT125G33BB) (Gear Drive)
--	2-7835	DECAL, Console (ELT140H33BBV, LT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV) (Hydro Drive - With Lights)
--	2-6709	DECAL, Console (Models BH140H33BBV & BH140H38BBV)
23	2-3504	KEY, Special (With Cover)
24	9-1001	SCREW, 5/16-18 x 5/8" Truss Head, Torx
25	2-3187	SWITCH, Lights (Hydro Drive Models Only!)
26	2-9714	SPACER
27	2-9721	NUT, 5/8-32 Hex
28	2-3506	BEZEL
29	9-1188	SCREW, #10-24 x 5/8" Machine (2)
30	9-1018	NUT, #8-32 Hex
31	2-3655	HANDLE, Throttle Control
32	2-4642	CONTROL, Throttle
33	9-1017	SCREW, #8-32 x 3/8" Cross-Recessed, Fillester Head

## SEAT, REAR FENDER & COMPONENTS

## ① ASSEMBLY

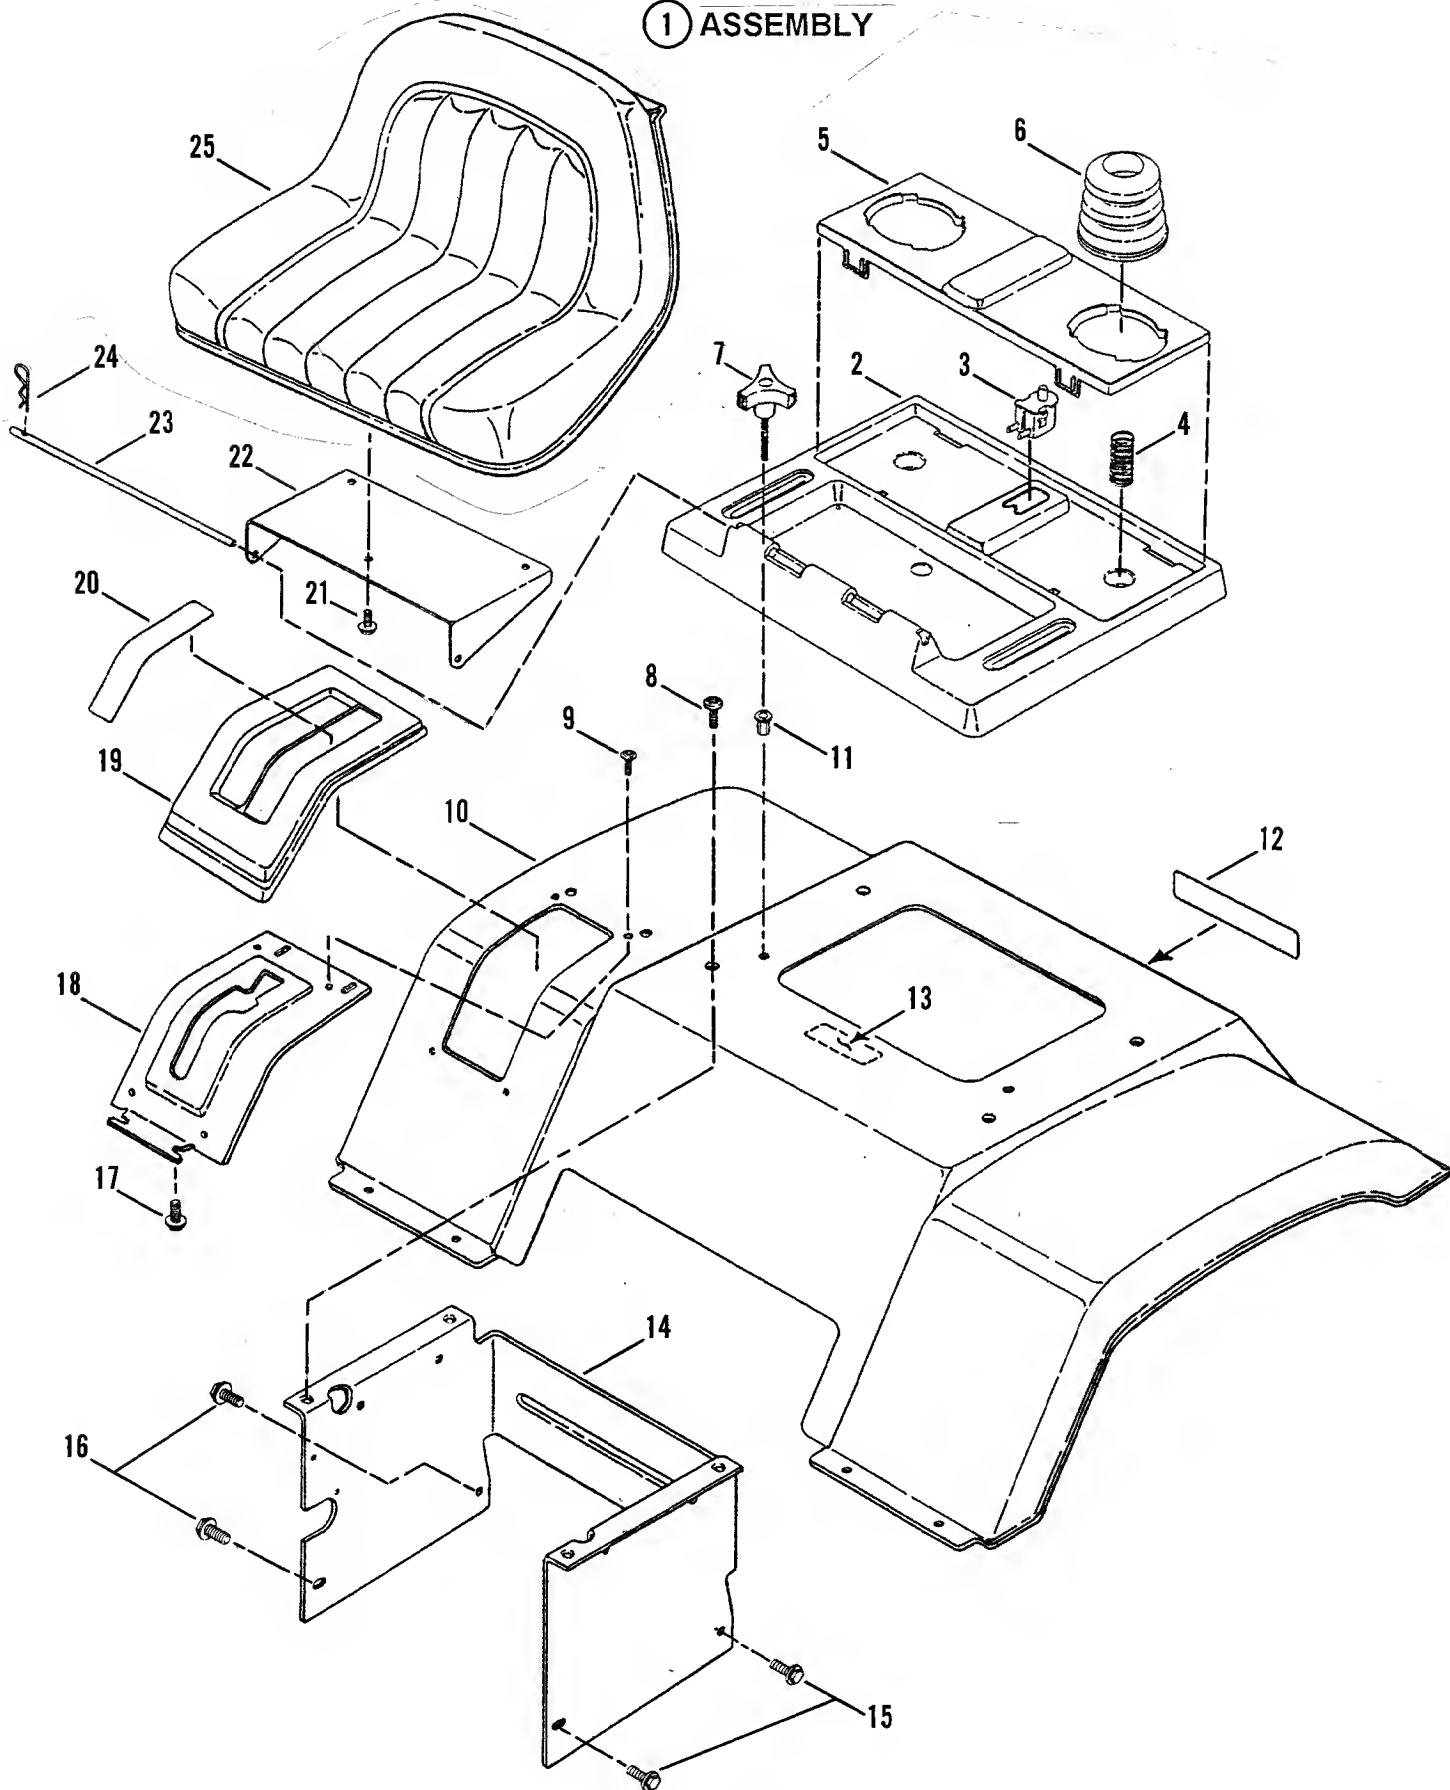





## SEAT, REAR FENDER & COMPONENTS

ITEM	PART NO.	DESCRIPTION
1	5-2606	ASSEMBLY, Seat Support (Includes items 2, 3, 5, & 2 item 4)
2	1-7852	SUPPORT, Seat
3	2-3354	SWITCH, Seat
4	2-2759	SPRING (2)
5	1-7851	HOLDER, Cushion
6	1-9109	CUSHION, Seat (2)
7	1-7875	KNOB, Seat Adjustment (2)
8	9-1001	SCREW, 5/16-18 x 5/8" Truss Head, Torx (4)
9	9-0362	SCREW, 1/4-20 x 5/8" Hex Washer Head, Self-Tapping (4)
10	3-3314	PAN, Seat (Fender)
11	9-1761	RIV-NUT, 5/16-18 Round (2)
12	2-4905	DECAL - SNAPPER, 7.28" Molded Logo, White Letters & Stripe (Gear Drive Models)
--	2-2971	DECAL - SNAPPER, 7.28" Molded Logo, Silver Letters & Blue Stripe (Hydro Drive Models)
--	2-6228	DECAL - BLACKHAWK, Molded Logo (Models BH140H33BBV & BH140H38BBV)
13	2-6415	DECAL - CAUTION, Battery Location
14	3-4711	SUPPORT, Fender
15	9-1523	SCREW, 5/16-18 x 5/8" Hex Washer Head, Swage Form (2 ea. on Right Side & 2 ea. on Left Side for Gear Drive Models Only!) (2 ea. on Left Side for Hydro Drive Models Only!) (4)
16	9-1524	SCREW, 5/16-18 x 1 1/4" Hex Washer Head, Swage Form (Used on Right Side for Hydro Models Only!) (2)
17	9-1105	SCREW, #10-16 x 1/2" Hex Washer Head, Self-Tapping (4)
18	3-4420	DETENT, Shift (Gear Drive) (30" & 33" Models)
--	3-3120	DETENT, Shift (Hydro Drive) (ELT 33", 38", & 42" Models)
19	2-4894	COVER, Shift
20	2-9623	DECAL, Shift Cover, 5-Speed (Gear Drive) (30" & 33" Models)
--	1-6576	DECAL, Shift Cover, 5-Speed (Hydro Drive) (30", ELT 33", 38", & 42" Models)
21	9-1525	BOLT, 5/16-18 x 1/2" Hex Flange Lock (3)
22	3-3318	BRACKET, Seat Support
23	3-3435	ROD, Seat Hinge
24	9-1503	PIN, 3/32 x 1 1/2" Hair
25	1-7879	SEAT, Operator's (30" & 33" Models, LT120G30BB & LT125G33BB Only!)
--	7-1564	SEAT, Operator's (ELT125G33BB & All Domestic Hydro Models) (Model Year 1995)
--	2-8621	SEAT, Operator's (ELT125G33BB & ELT140H33BBV) (Model Year 1996)

# FRONT AXLE & FRONT WHEEL PARTS

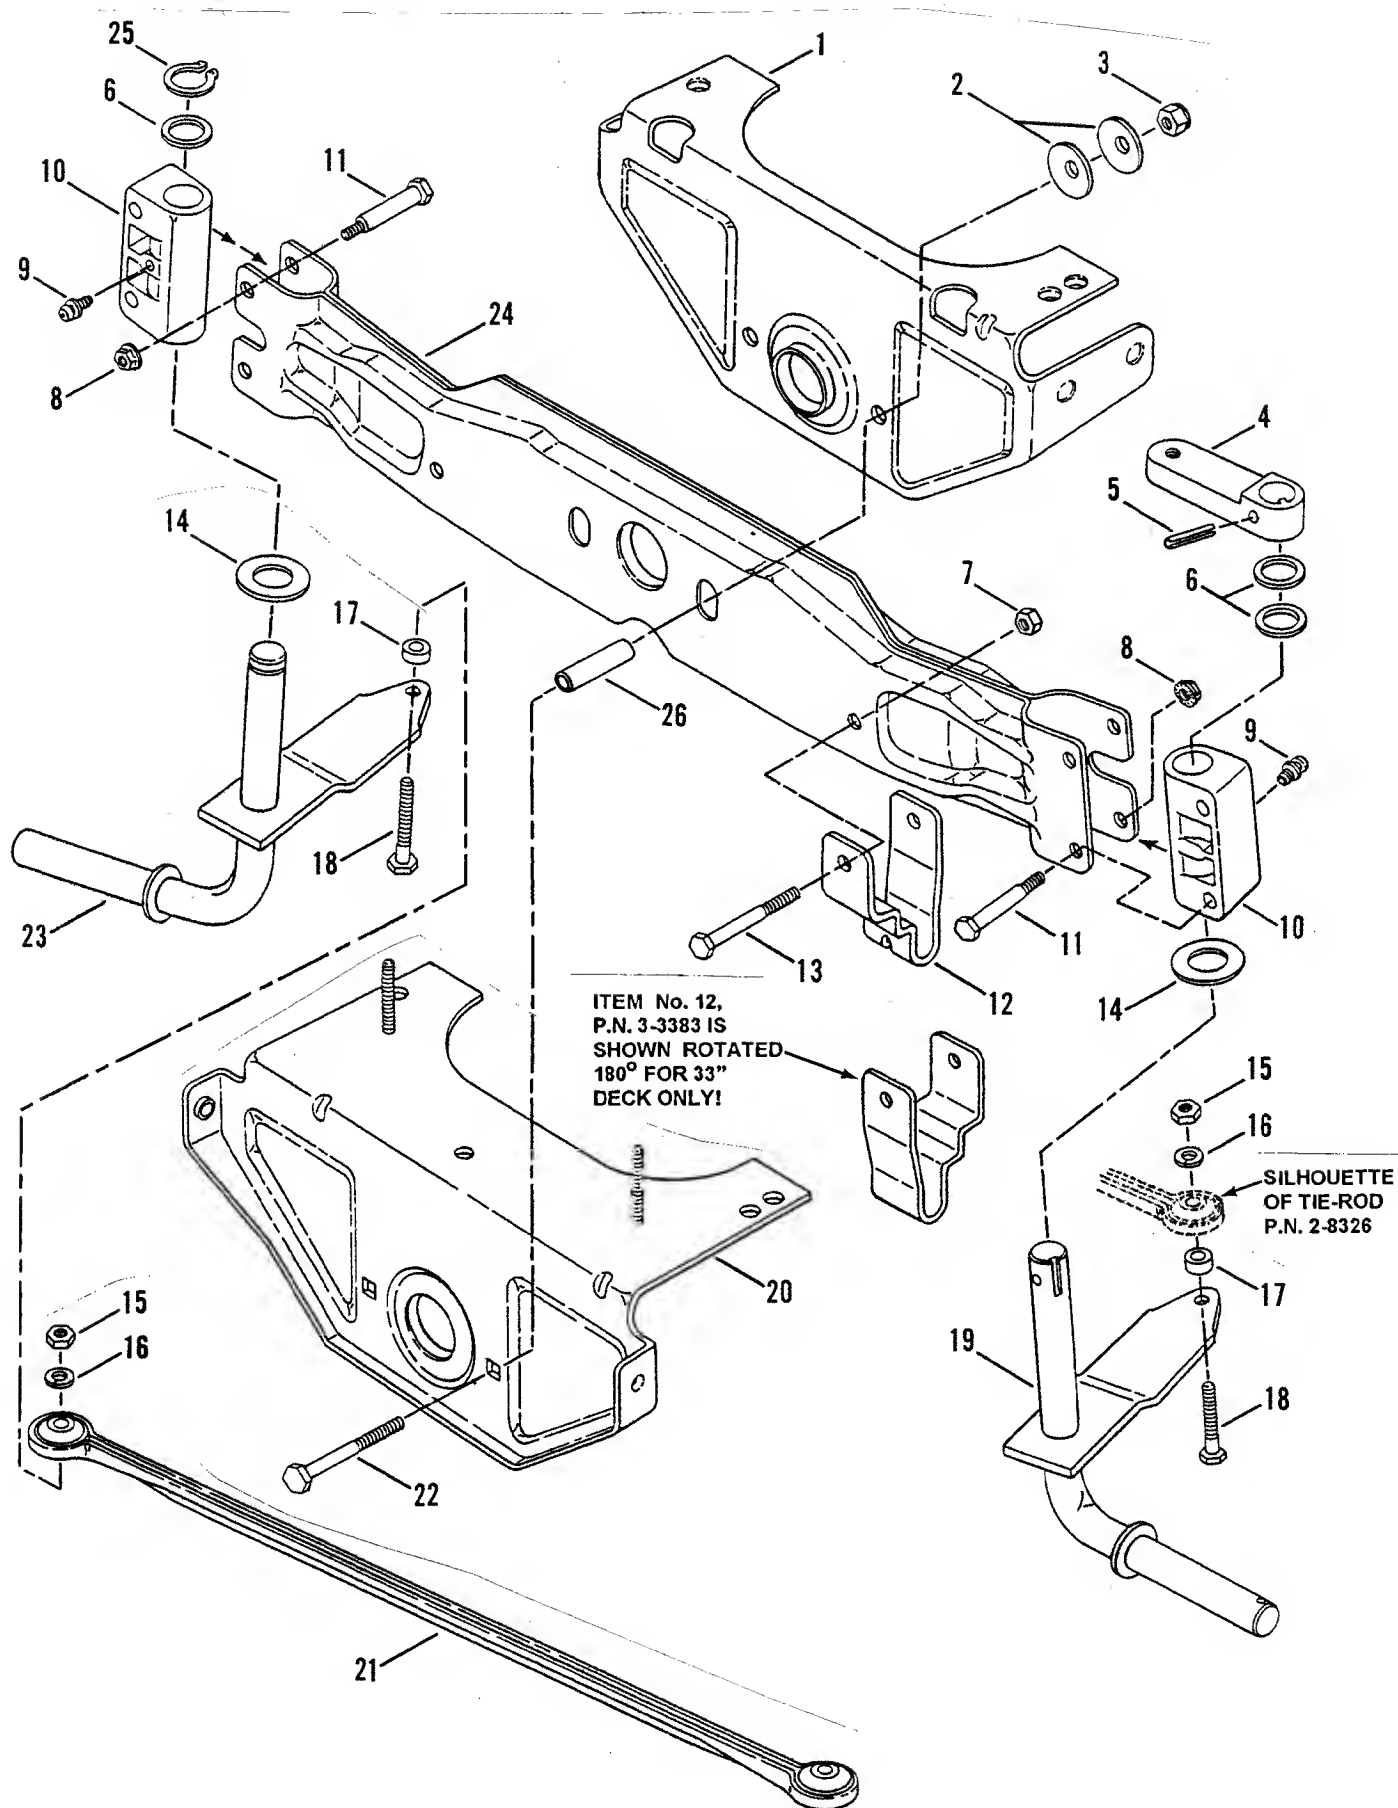


# FRONT AXLE & FRONT WHEEL PARTS

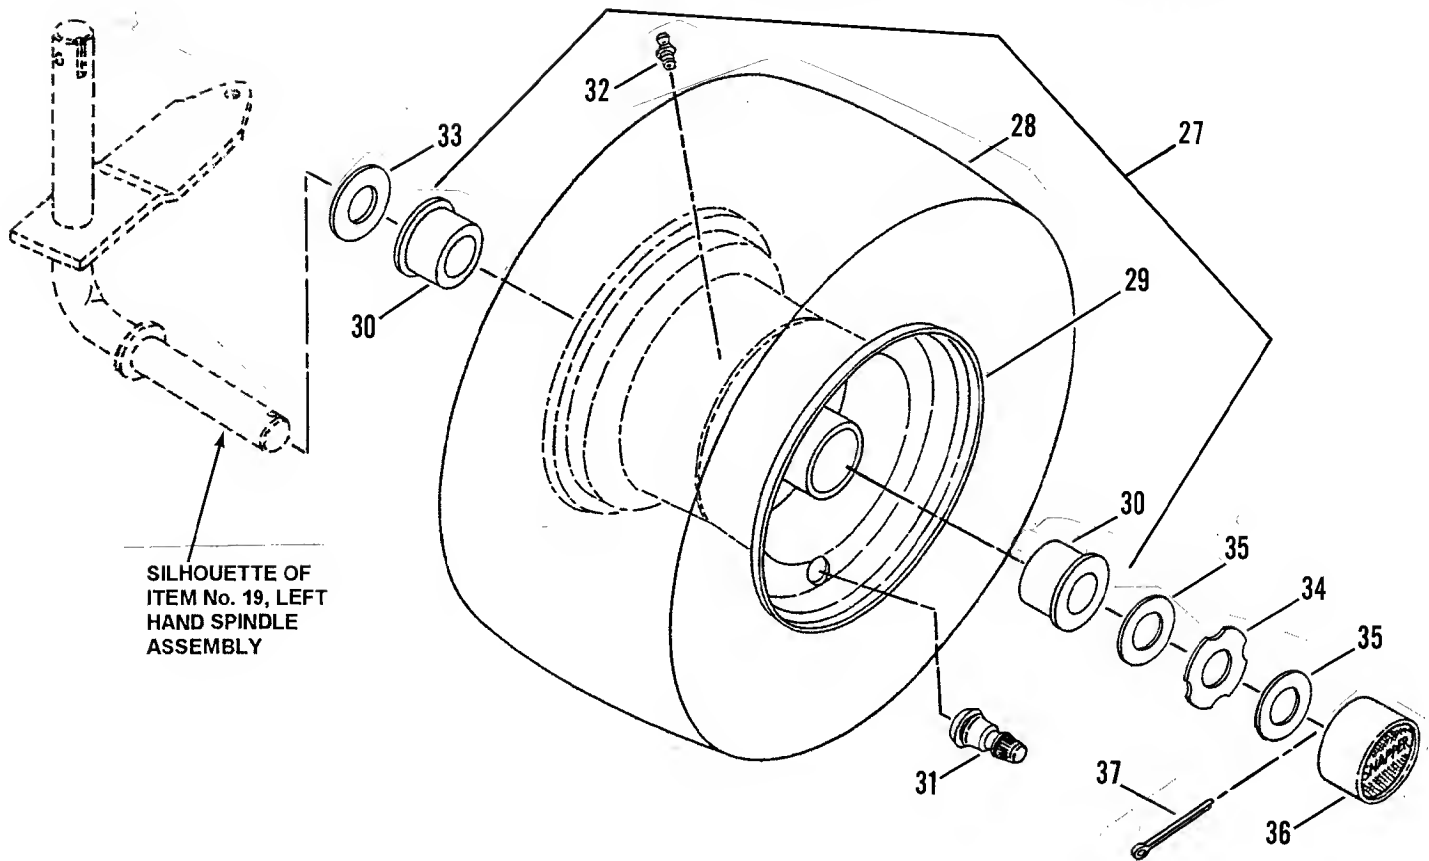

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	3-3374	BRACKET, Axle (Rear)	21	2-8326	TIE-ROD
2	1-2063	WASHER, Cone (4)	22	9-0590	BOLT, 3/8-16 x 3" Hex Head (2)
3	7-6979	NUT, 3/8-16 Nyloc (2)	23	4-1245	SPINDLE ASSY., Right Hand, Long (For 13" Tires - 30" & 33" Decks)
4	1-9034	ARM, Steering	—	4-1251	SPINDLE ASSY., Right Hand, Short (For 15" Tires - 38" & 42" Decks)
5	9-0842	ROLL-PIN, 1/4 x 1 1/4"	24	4-0986	AXLE, Front
6	1-0935	WASHER, Shim (3)	25	1-0746	RING, Retaining
7	9-0184	NUT, 5/16-18 Center Lock (2)	26	2-6595	SPACER (2)
8	9-0477	NUT, 1/4-20 Hex Flg. Top-Lock (2)	27	5-2681	ASSEMBLY, Front Tire & Rim, 30" & 33" Decks (Includes items 28 thru 32)
9	1-3864	FITTING, Lube (2)	—	5-2957	ASSEMBLY, Front Tire & Rim, 38" & 42" Decks (Includes items 28 thru 32)
10	1-9467	BEARING, Spindle (2)	28	2-2773	TIRE, 13 x 5.00 (30" & 33" Decks)
11	2-2758	BOLT, 1/4-20 x 1 41/64" Shoulder (4)	—	2-6109	TIRE, 15 x 6.00 (38" & 42" Decks)
12	3-3383	BRACKET, Deck Hanger (2)	29	2-2772	RIM, 5.50 x 4.00
13	9-1046	SCREW, 5/16-18 x 2 1/2" Hex Head Cap (2)	30	1-4483	BEARING, Wheel (2)
14	3-1036	WASHER, Thrust (2)	31	1-2234	VALVE, Air (Snap-In)
15	9-1302	NUT, 3/8-16 Hex, Grade 5 (2)	32	1-3876	FITTING, Lube
16	9-1320	WASHER, 3/8 Split Lock (2)	33	3-4453	WASHER, Flat, .15 x .78 I.D. x 1.5" O.D.
17	2-4180	SPACER, Tie-Rod (2)	34	2-9618	WASHER, Hub-Cap Retaining
18	9-1497	SCREW, 3/8-16 x 1 1/2" Hex Head Cap, Grade 5 (2)	35	2-9617	WASHER, Flat, .07 x .77 I.D. x 1.31" O.D. (2)
19	4-1246	SPINDLE ASSY., Left Hand, Long (For 13" Tires - 30" & 33" Decks)	36	1-1022	HUB-CAP
—	4-1250	SPINDLE ASSY., Left Hand, Short (For 15" Tires - 38" & 42" Decks)	37	9-1516	COTTER-PIN, 5/32 x 1"
20	5-2490	BRACKET ASSEMBLY, Axle (Front)			


# TRANSMISSION GROUP (Hydro Drive) & REAR WHEELS

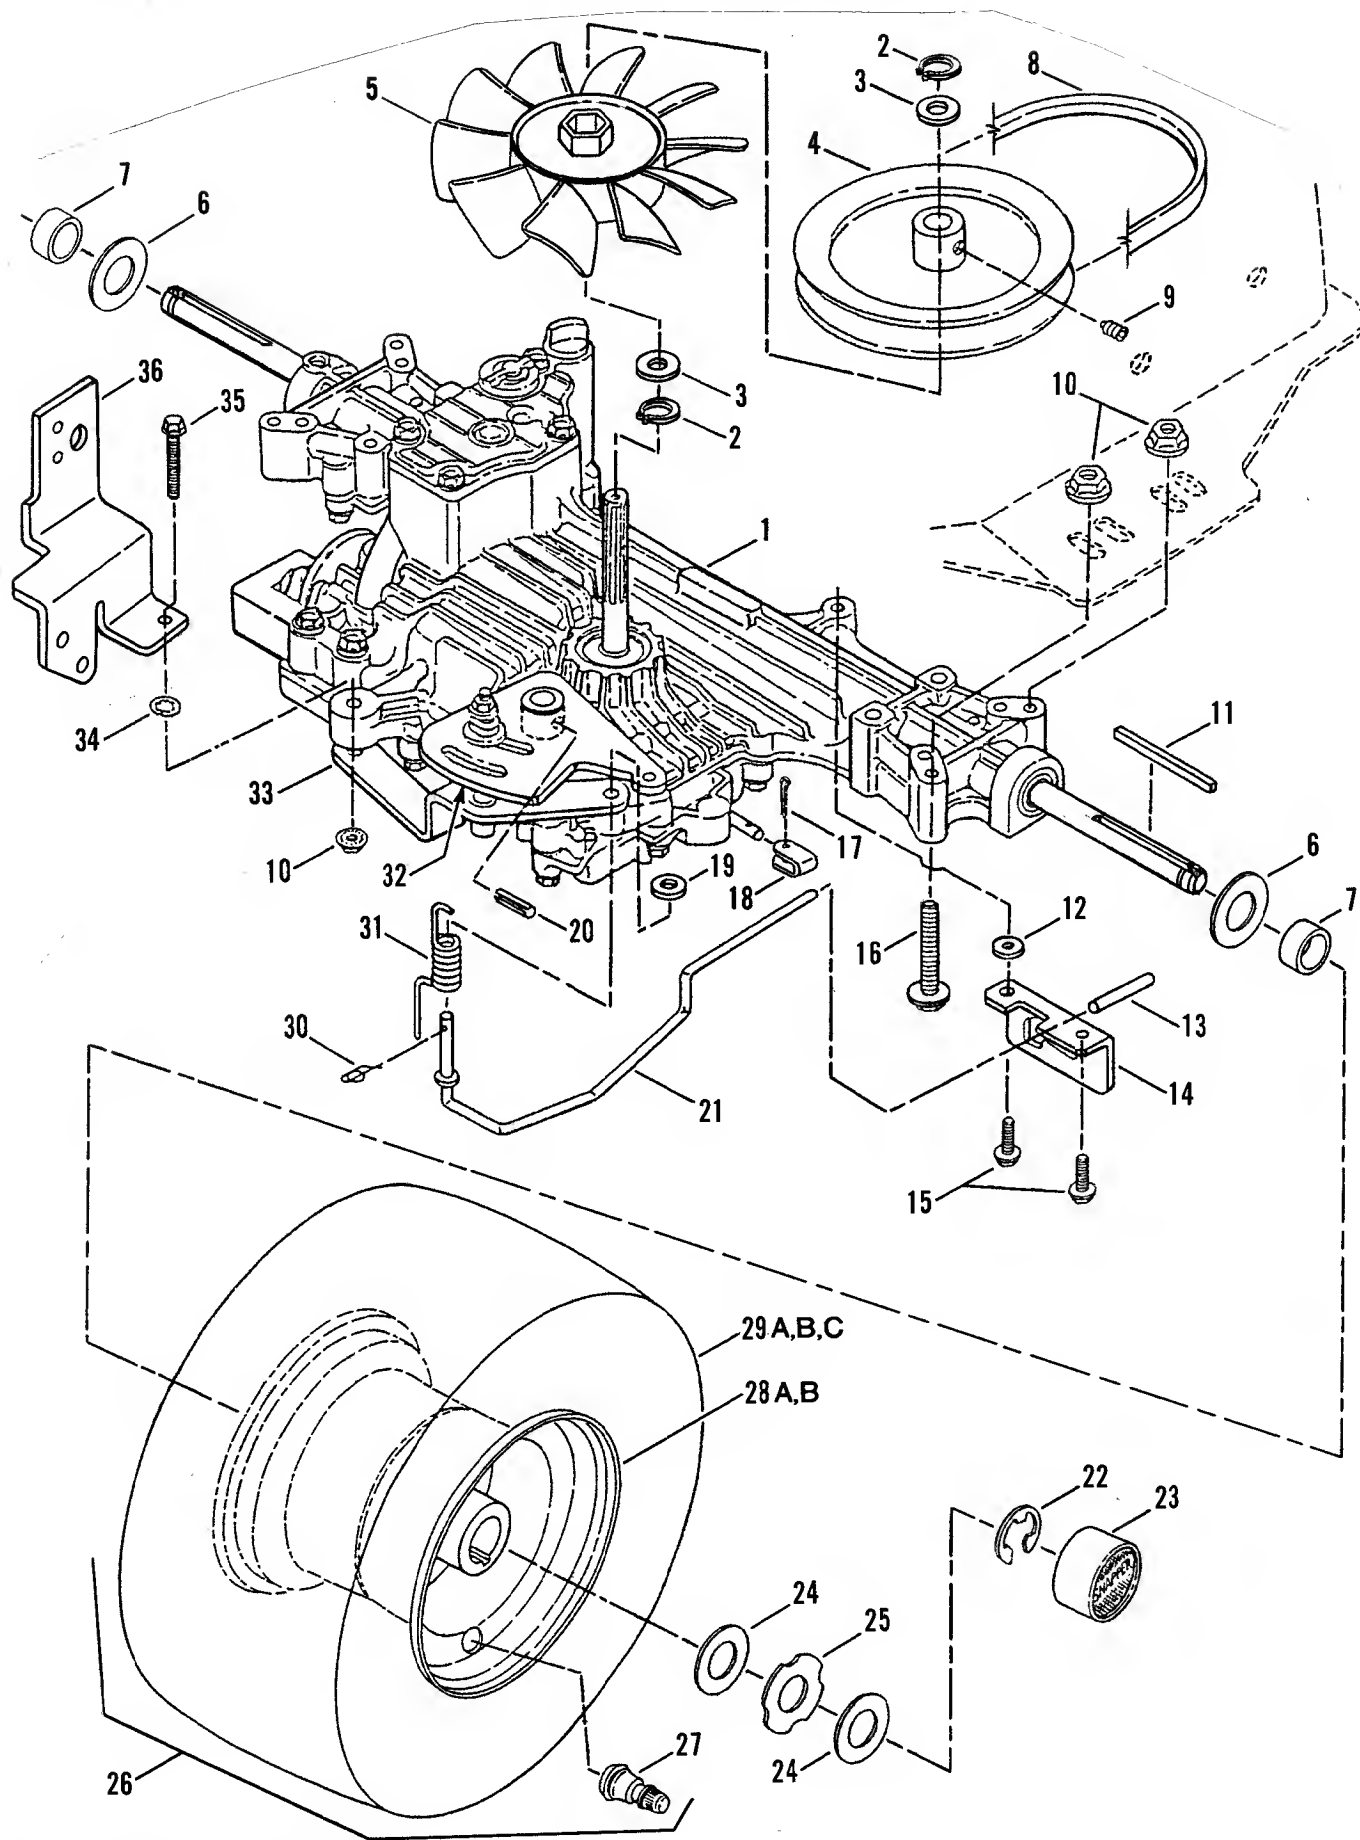

## TRANSMISSION GROUP (Hydro Drive) & REAR WHEELS

ITEM	PART NO.	DESCRIPTION
1	2-8083	TRANSAXLE, Hydro Drive, Tuff-Torq Model K50 (Models ELT140H33BBV, LT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV)
2	2-8078	RING, Retaining (2)
3	2-8084	WASHER, Fan/Hub (2)
4	2-8077	PULLEY, Drive
5	2-8076	FAN
6	3-4453	WASHER, Flat, .132 x .781 I.D. x 1.5 O.D. (2)
7	2-8049	SPACER (2)
8	2-8334	BELT, Traction Drive (Models LT140H33BBV, ELT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV) (Hydro Drive Only!)
--		(Note: This Part No. used on Models LT140H33BBV & ELT140H33BBV Model Year 1995 Only!)
--	2-8585	BELT, Traction Drive (Models LT140H33BBV & ELT140H33BBV) (Model Year 1996)
9	9-1277	SETSCREW, 1/4-20 x 5/16" Locking
10	9-1601	NUT, 5/16-18 Hex Flange Lock (5)
11	1-7173	KEY, Square, 3/16 x 3/16 x 2 1/2" (2)
12	3-2070	WASHER, Flat, 3/4" O.D.
13	3-4137	GRIP, Roll Release
14	3-4139	DETENT, Roll Release
15	9-1284	SCREW, 3/8-16 x 1 3/4" Self-Tapping (2)
16	9-0702	BOLT, 5/16-18 x 2 1/4" Hex Flange Lock (4)
17	9-1516	COTTER-PIN, 5/32 x 1"
18	3-4154	LINK, Roll Release
19	9-1296	WASHER
20	3-4146	ROLL-PIN, Speed Control Arm
21	3-4140	WIREFORM, Roll Release
22	2-9738	RING, Retaining
23	1-1022	HUB-CAP
24	2-9617	WASHER, Flat, .07 x .77 I.D. x 1.31 O.D. (2)
25	2-9618	WASHER, Hub-Cap Retaining
26	5-2845	ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A)
--	5-2846	ASSEMBLY, Rear Tire & Rim (Model LT140H38BBV) (Includes items 27, 28B, & 29B)
--	5-3563	ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C)
27	1-2234	VALVE, Air (Snap-in)
28A	2-4453	RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV)
28B	2-4454	RIM, 8 x 7.00 (Models LT140H38BBV, LT150H38BBV, & LT155H42BBV)
29A	2-6112	TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV)
29B	2-6113	TIRE, 18 x 8.50 (Model LT140H38BBV)
29C	2-9589	TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV)
30	3-4162	COTTER-PIN, 5/16 Self-locking
31	3-4155	SPRING, Torsion (Roll Release)
32	5-3386	ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below)
--	4-1612	WELDMENT, Speed Control Arm
--	2-8036	SPRING
--	3-4192	STUD, Friction
--	9-0593	NUT, 3/8-16 Hex Flange Lock
--	9-1331	WASHER, .120 x .406 I.D. x 1.5 O.D. (2)
--	3-4267	WASHER, Friction Pad (2)
33	5-3380	SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)
--	1-2306	BUSHING, Flange
--	3-4178	SUPPORT, Friction Stud
34	1-1791	RETAINER, 5/16 Bolt
35	9-1592	BOLT, 5/16-18 x 2" Hex Flange Lock
36	3-4400	BRACKET, Spool

# TRANSMISSION GROUP (Gear Drive) & REAR WHEELS

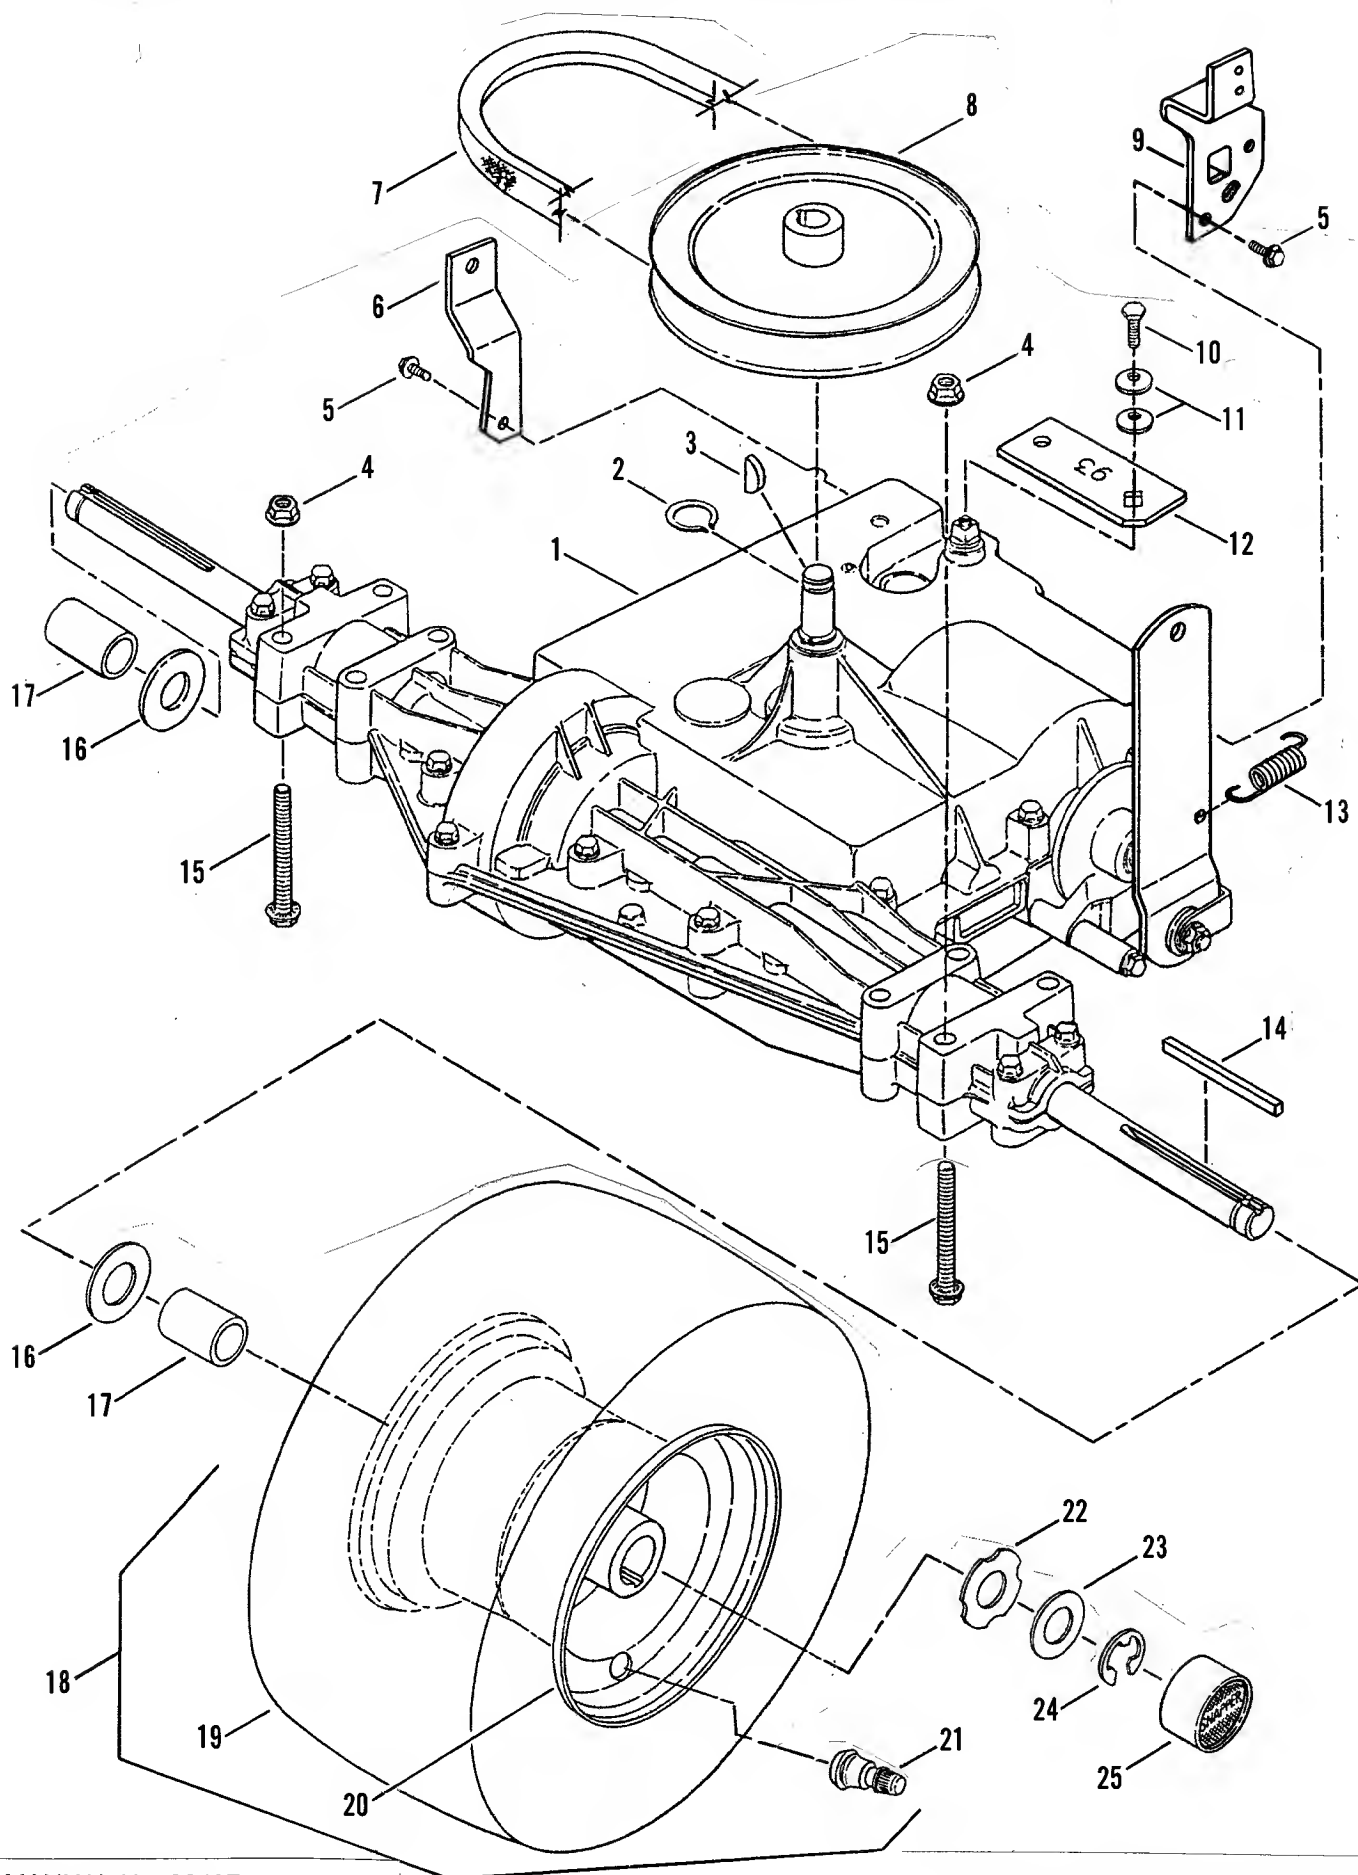


# TRANSMISSION GROUP (Gear Drive) & REAR WHEELS

ITEM	PART NO.	DESCRIPTION
1	*205-514	TRANSAXLE, Gear Drive, Peerless Model MST205, 5-Speed (Models LT120G30BB, LT125G33BB, & ELT125G33BB)
2	1-2763	RING, Retaining
3	1-0211	KEY, Woodruff, 3/16 x 3/4", No. 9
4	9-1601	NUT, 5/16-18 Hex Flange Lock (4)
5	9-0361	SCREW, 5/16-18 x 5/8" Hex Washer Head, Self-Tapping (3)
6	3-3951	BRACKET, Torque
7	2-9641	BELT, Traction Drive (Models LT120G30BB, LT125G33BB, & ELT125G33BB) (Gear Drive Only!)
8	2-4831	PULLEY, Drive
9	3-4439	BRACKET, Axle/Spool
10	9-1165	BOLT, 1/4-28 x 5/8" Hex Head
11	9-0746	WASHER, Bellville (2)
12	3-3754	ARM, Shift Link Lever
13	2-2437	SPRING, Brake Return
14	1-7173	KEY, Square, 3/16 x 3/16 x 2 1/2" (2)
15	9-0702	BOLT, 5/16-18 x 2 1/4" Hex Flange Lock (4)
16	3-1036	WASHER, Flat (2)
17	2-4857	SPACER (2)
18	5-2845	ASSEMBLY, Rear Tire & Rim (Models LT120G30BB, LT125G33BB, & ELT125G33BB) (Includes items 19, 20, & 21)
19	2-6112	TIRE, 18 x 7.50 (Models LT120G30BB, LT125G33BB, & ELT125G33BB)
20	2-4453	RIM, 8 x 5.375 (Models LT120G30BB, LT125G33BB, & ELT125G33BB)
21	1-2234	VALVE, Air (Snap-in)
22	2-9618	WASHER, Hub-Cap Retaining
23	2-9617	WASHER, Flat, .07 x .77 I.D. x 1.31 O.D.
24	1-2705	RING, Retaining
25	1-1022	HUB-CAP

\*VENDOR PART  
NUMBER

## BELT GUIDE ASSEMBLY

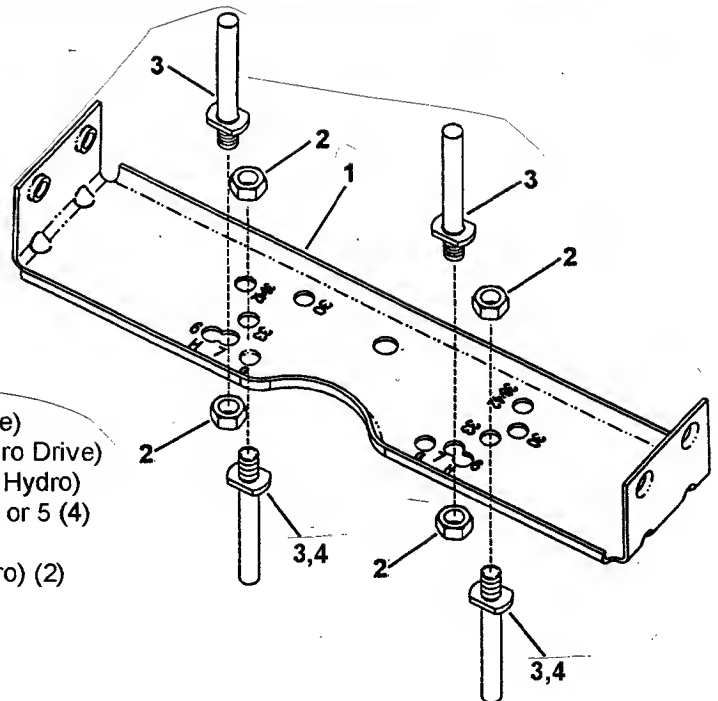


ITEM	PART NO.	DESCRIPTION
1	3-5963	BRACKET, Belt Guide (33" Gear Drive)
--	3-4320	BRACKET, Belt Guide (38" & 42" Hydro Drive)
--	3-4858	BRACKET, Belt Guide (30" Gear, 33" Hydro)
2	9-1575	NUT, 5/16-18 Hex Center Lock, Gr. B or 5 (4)
3	2-8303	STUD, Belt Guide, 2-7/8" L* (2 or 4)
4	2-8304	STUD, Belt Guide, 2-1/2" L* (33" Hydro) (2)

\*Overall Length (including threads)

NOTE: ORDER COMPONENTS FOR BELT GUIDE BRACKET INDIVIDUALLY & ASSEMBLE FOR YOUR PARTICULAR MODEL. REFER TO ABOVE EXAMPLE, PAGE 19 DETAIL & THE BELT GUIDE ASSEMBLY ON YOUR TRACTOR.

# FRAME, CLUTCH, BRAKE & STEERING COMPONENTS

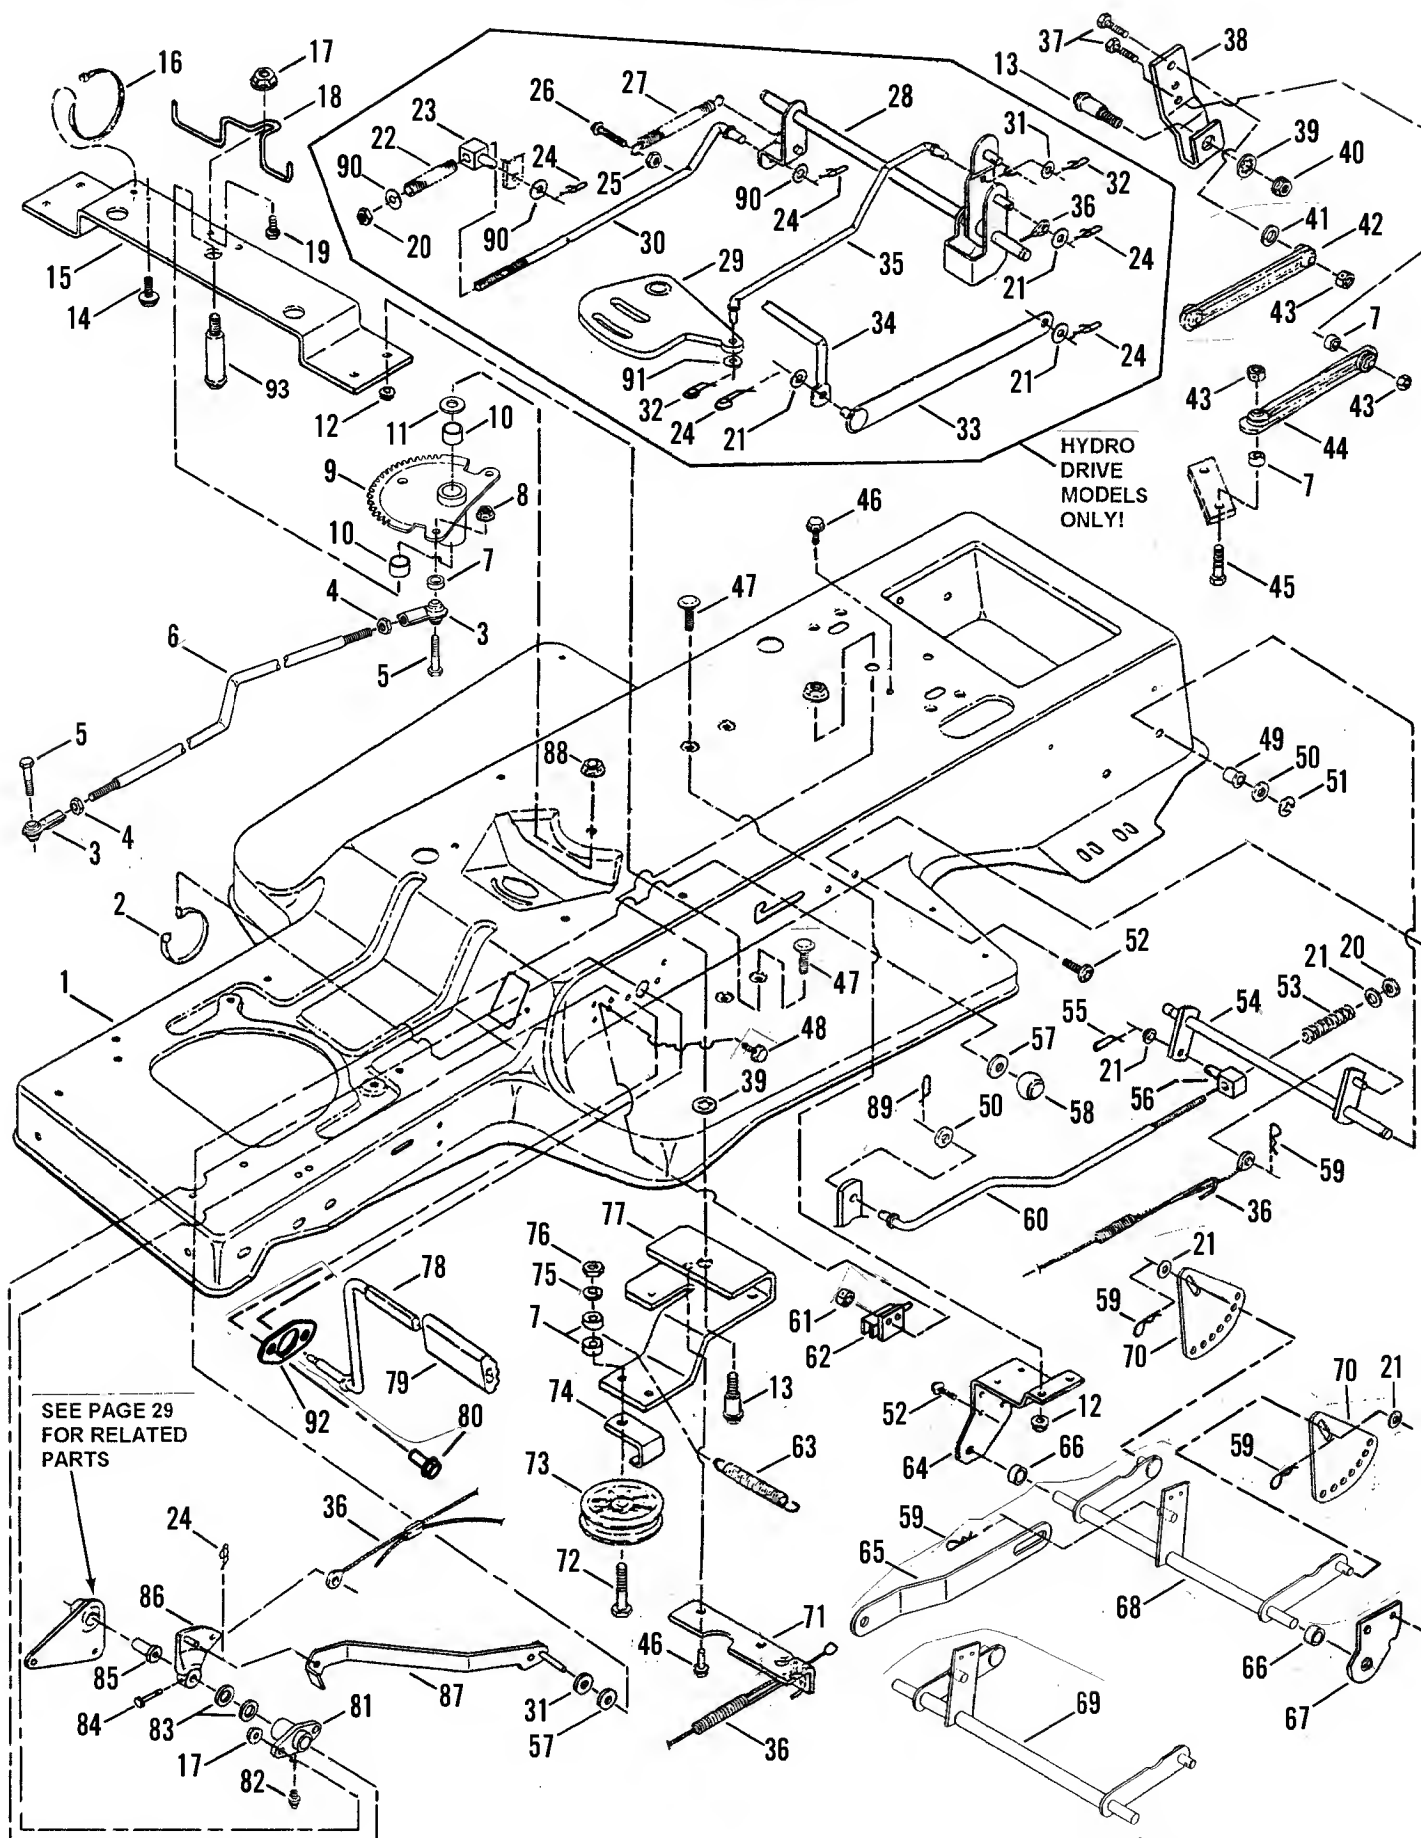




# FRAME, CLUTCH, BRAKE & STEERING COMPONENTS

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	3-4705	FRAME, Tractor	52	9-1001	SCREW, 5/16-18 x 5/8" Truss Head (Torx) (5)
2	1-4451	TIE, Wire	53	2-4381	SPRING, Brake
3	2-7936	ROD END (2)	54	4-1347	WELDMENT, Brake Pivot
4	9-0482	NUT, 3/8-24 Hex Jam (2)	55	2-4874	PIN, 1/6 x 1 27/64" Cotter (Self-Locking)
5	9-0163	SCREW, 3/8-24 x 1 1/4" Hex Head Cap (2)	56	2-4586	SWIVEL, Brake Link
6	2-8420	LINK, Drag	57	2-3649	WASHER, 5/16 Nylon (2)
7	2-4180	SPACER (5)	58	2-8362	KNOB, Push/Pull
8	9-0613	NUT, 3/8-16 Hex Flange Lock	59	1-5067	PIN, 3/32 x 1 1/2" Hair (4)
9	5-3568	ASSEMBLY, Sector Gear (Includes item 10)	60	2-4430	ROD, Brake
10	1-2706	BEARING, Sector Gear (2)	61	9-0376	NUT, #10-32 Hex Nyloc (2)
11	3-1036	WASHER, 3/4 Thrust	62	2-3355	SWITCH
12	9-0583	NUT, 1/4-20 Hex Flange Lock (6)	63	2-4383	SPRING
13	2-2381	BOLT, 1/2-13 x 2" Hex Flng. Lk. (2)	64	3-3521	BRACKET, Rear Lift/PTO Lever
14	9-0913	SCREW, #10-24 x 1/2" S.T. (Torx)	65	3-4850	LINK, Lift (Models: LT140H38BBV, LT150H38BBV, & LT155H42BBV)
15	3-3627	BRACE, Sector Gear	--	3-4347	LINK, Lift (Models: LT125G33BB, ELT125G33BB, LT140H33BBV, & ELT140H33BBV)
16	1-2080	TIE, Cable	--	3-4386	LINK, Lift (Model: LT120G30BB)
17	9-0585	NUT, 5/16-18 Hex Flange Lock (3)	66	3-4384	SPACER (2)
18	2-8314	GUIDE, Drive Belt	67	3-3520	BRACKET, Deck Hang Pivot
19	9-0595	BOLT, 5/16-18 x 3/4" Hex Flng. Lk.	68	4-1256	WELDMENT, Rear Lift (Models: LT140H38BBV, LT150H38BBV, & LT155H42BBV)
20	9-1299	NUT, 3/8-16 Hex Nyloc	69	4-1249	WELDMENT, Rear Lift (Models: LT120G30BB, LT125G33BB, ELT125G33BB, ELT140H33BBV, & LT140H33BBV)
21	9-0122	WASHER, 3/8 Flat (7)	70	3-4377	PLATE, Lift Sector (2)
22	2-8091	SPRING, Brake	71	3-3595	EXTENSION, Idler Arm
23	2-8037	SWIVEL, Inline Brake	72	9-1560	SCREW, 3/8-16 x 2 1/4" Hex Head Cap
24	9-1593	PIN, 3/64 x 1 7/32" Cotter (Self-Lkg.)	73	2-3954	PULLEY
25	9-0184	NUT, 5/16-18 Hex Center Lock	74	3-3556	GUIDE, Pulley
26	9-1151	SCREW, 5/16-18 x 1 1/4" Self-Tapp.	75	9-1320	WASHER, 3/8 Split Lock
27	1-2264	SPRING	76	9-1302	NUT, 3/8-16 Hex
28	4-1589	WELDMENT, Brake Arm	77	3-3557	ARM, Idler (Traction Drive)
--	4-1703	WELDMENT, Brake Arm (LT140H33BBV & ELT140H33BBV) (Model Year 1996)	78	2-2743	PEDAL, Park Brake
29	4-1612	ARM, Transmission Speed Control	79	1-2661	PAD, Pedal
30	2-8034	ROD, Brake	80	9-1000	SCREW, 3/8-16 x 7/8" Truss Head (Torx) (2)
31	9-0188	WASHER, 5/16 Flat	81	5-2431	ASSEMBLY, Foot Shaft Pivot (Includes item 82)
32	3-4162	PIN, 5/16 Cotter, Self-locking (2)	82	1-4871	FITTING, Lube
33	4-1590	WELDMENT, Shift Link	83	1-5992	WASHER, 5/8 Flat (2)
34	5-2920	ASSEMBLY, Shift Lever (Lower)	84	2-3645	PIN, 3/16 x 1 1/2" Clevis
35	3-4159	LINK, Speed	85	2-2742	BEARING, Flange
--	3-4704	LINK, Speed (LT140H33BBV & ELT140H33BBV) (Model Year 1996)	86	4-1236	ASSEMBLY, Clutch Brake Arm
36	2-4115	ASSEMBLY, Clutch/Brake Cable	87	4-1244	LATCH, Park Brake
37	9-0143	SCREW, 3/8-16 x 1 1/4" H. H. C. (2)	88	9-0975	NUT, 1/2-13 Hex Center Lock
38	3-3555	BELLCRANK, Shift Lever	89	9-1594	PIN, 1/16 x 1 27/64 Cotter (Self-Locking)
39	9-0509	WASHER, 1/2 Internal Tooth Lk. (2)	90	9-1514	WASHER, 3/8 Flat
40	9-0619	NUT, 1/2-13 Hex Flange Lock (2)	91	9-1296	WASHER, 11/32" Flat Grade 5
41	9-0118	WASHER, 3/8 Split Lock (2)	92	4-6778	WASHER, Pivot- Stiffener
42	2-4286	LINK, Shift Lever	93	2-4604	BOLT, Shoulder 1/2-13x3 7/8"
43	9-1585	NUT, 3/8-16 Hex Center Lock (3)			
44	2-5041	LINK, Shift Lever (Twisted)			
45	9-1497	SCREW, 3/8-16 x 1 1/2" H. H. C.			
46	9-0361	SCREW, 5/16-18 x 5/8" Self-Tap (3)			
47	9-0803	BOLT, 1/4-20 x 5/8" Carriage (6)			
48	9-1240	SCREW, #10-32 x 5/8" H. W. H. (2)			
49	1-1016	BEARING, Nylon (2)			
50	9-1587	WASHER, 1/2 Flat			
51	1-4341	RING, 1/2" External Retaining (2)			

# BLADE ENGAGEMENT & TRANSMISSION CONTROLS

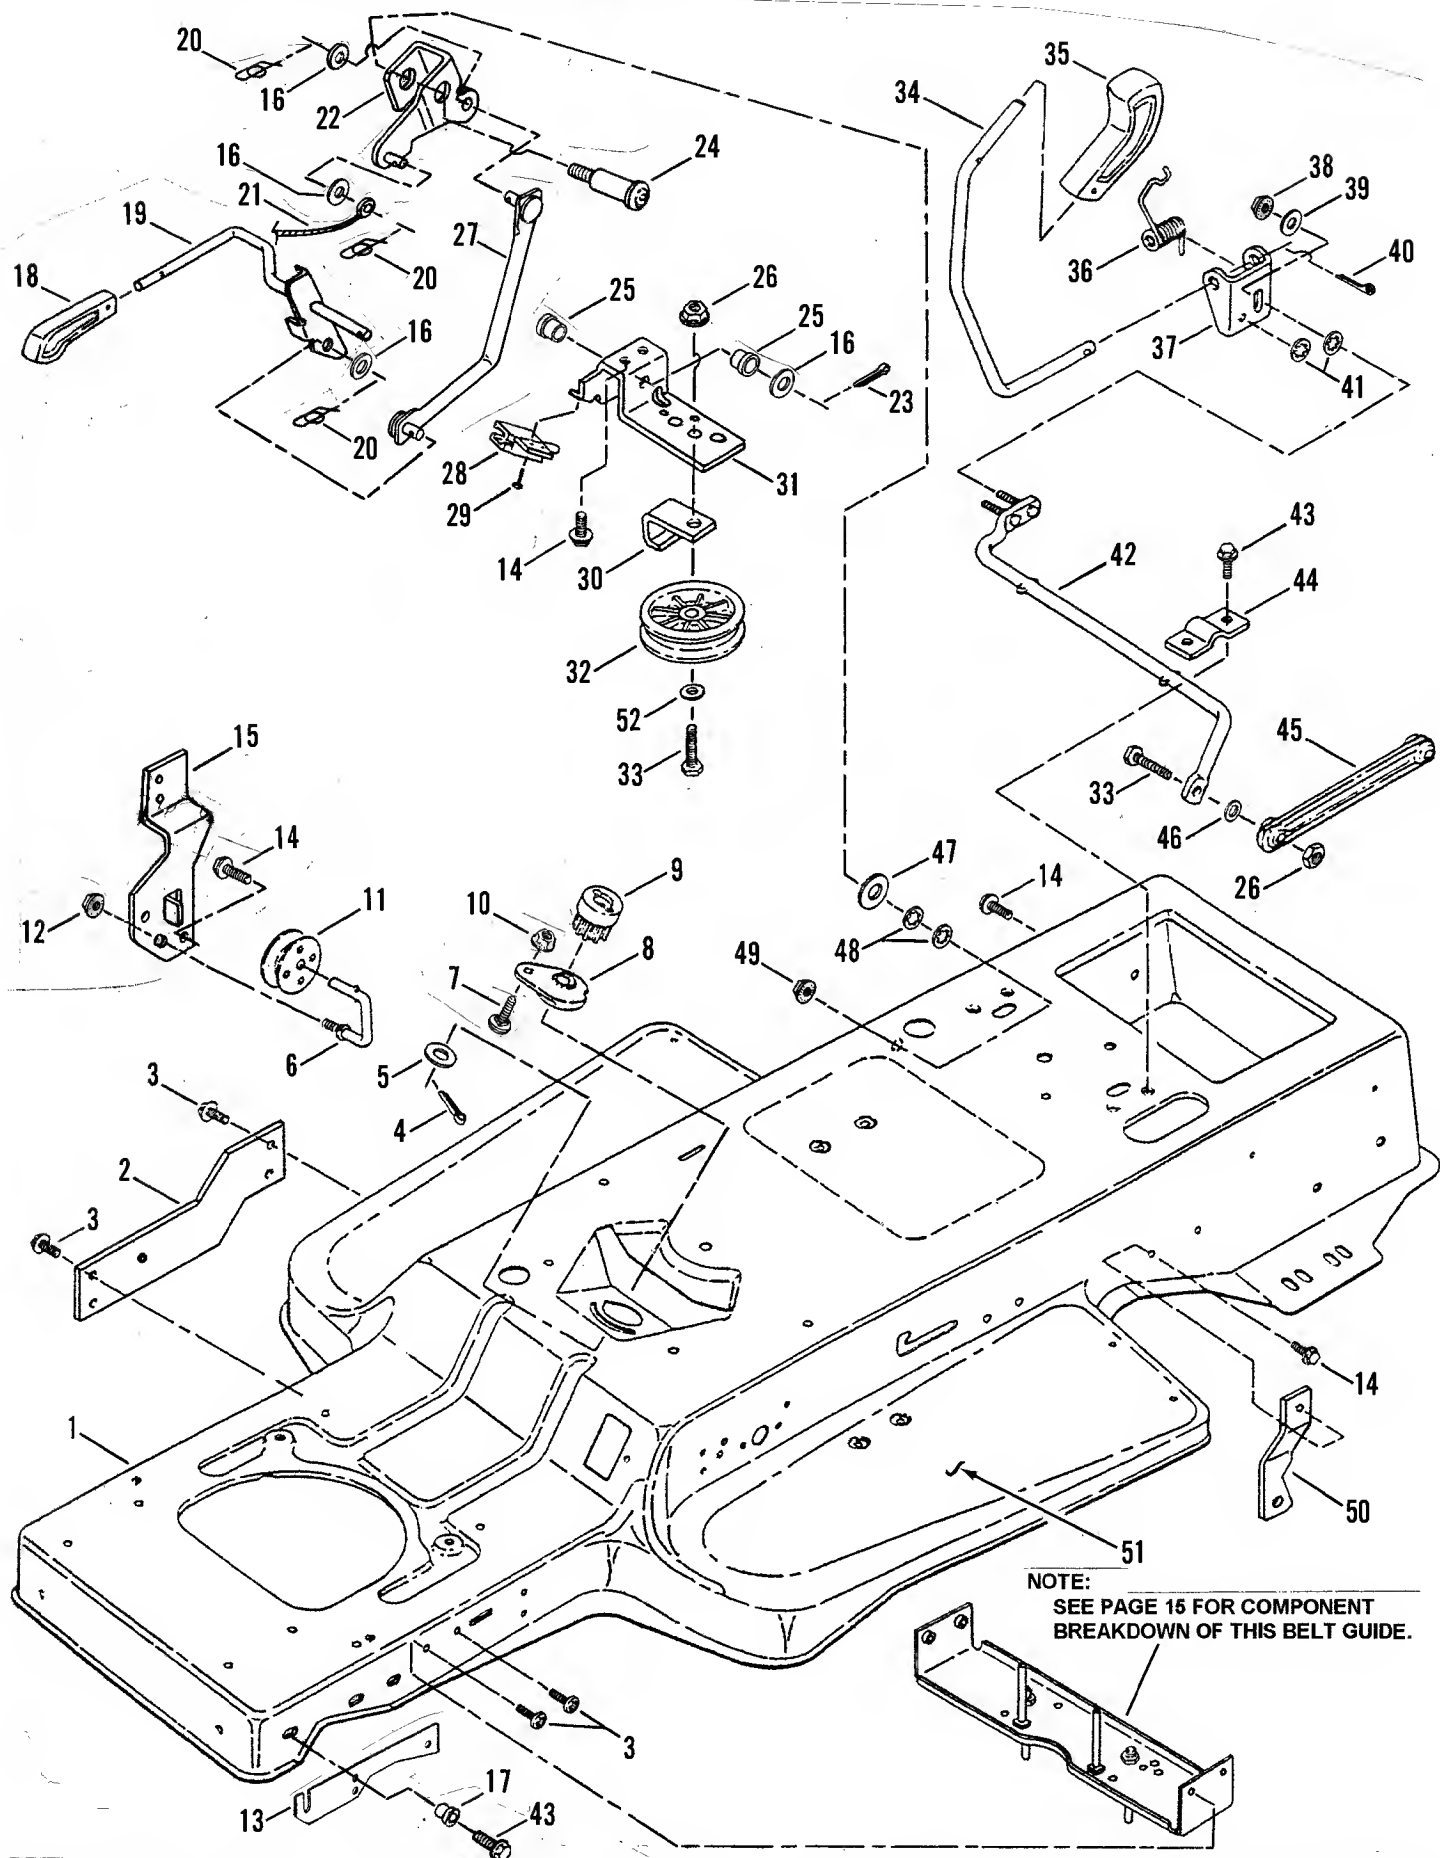


# BLADE ENGAGEMENT & TRANSMISSION CONTROLS

ITEM	PART NO.	DESCRIPTION
1	3-3301	FRAME, Tractor
2	3-4842	BRACE, Frame (2)
3	9-1001	SCREW, 5/16-18 x 5/8" Truss Head (Torx) (13)
4	9-1598	PIN, 1/8 x 3/4" Cotter
5	1-4296	WASHER, 1/2 Shim (2)
6	2-9600	ROD, Spool Pivot
7	9-1584	NUT, 1/4-20 Hex Flange Lock
8	5-2562	ASSEMBLY, Steering Adjuster
9	2-2368	GEAR, Steering Pinion
10	9-1573	BOLT, 1/4-20 x 5/8" Short Neck Carriage
11	2-3182	SPOOL
12	9-0585	NUT, 5/16-18 Hex Flange Lock
13	3-3488	BRACKET, Hood Pivot
14	9-0361	SCREW, 5/16-18 x 5/8" Self-Tap. (4)
15	3-4439	BRACKET, Axle/Spool
16	9-0122	WASHER, 3/8 Flat (3)
17	2-4616	BUSHING, Flange (2)
18	2-3657	KNOB, Deck Engagement
19	4-1619	WELDMENT, PTO Lever
20	2-4159	PIN, 3/64 x 1 7/32" (Self-Locking) (3)
21	2-8366	CABLE, Blade (Models: LT120G30BB, LT125G33BB, ELT125G33BB, & LT140H33BBV)
--	2-8367	CABLE, Blade (Models: LT140H38BBV & LT150H38BBV)
--	2-8368	CABLE, Blade (Model: LT155H42BBV)
22	4-1238	WELDMENT, PTO Bellcrank
23	9-0037	PIN, 3/32 x 3/4" Cotter
24	2-4518	BOLT, 1/2-13 x 2 11/32" Shoulder
25	1-3321	BUSHING (2)
26	9-1585	NUT, 3/8-16 Hex Center Lock
27	4-1237	ROD, PTO Link
28	2-3355	SWITCH


ITEM	PART NO.	DESCRIPTION
29	9-0913	SCREW, #10-24 x 1/2" Self-Tapp. (2)
30	3-3556	GUIDE, Belt
31	3-4332	SUPPORT, PTO Lever
32	2-4344	PULLEY
33	9-1497	SCREW, 3/8-16 x 1 1/2" Hex Hd. Cap
34	2-3957	LEVER, Shift
35	2-3656	KNOB, Deck Lift Lever
36	2-4069	SPRING, Shift Lever
37	3-3541	BRACKET, Shift Lever (Upper)
38	7-6978	NUT, 1/4-20 Hex Flange Lock
39	9-0055	WASHER, 1/4 Flat
40	9-0364	PIN, 5/32 x 1" Cotter
41	9-1023	WASHER, 1/4 Internal Tooth Lock (2)
42	5-2920	ASSEMBLY, Shift Lever (Lower)
43	9-1151	SCREW, 5/16-18 x 1 1/4" Self-Tap. (4)
44	3-3554	CLIP (2)
45	2-4286	LINK, Shift Lever
46	2-4180	SPACER
47	3-1036	WASHER, Thrust
48	9-0509	WASHER, 1/2 Internal Tooth Lock (2)
49	9-0619	NUT, 1/2-13 Hex Flange Lock
50	3-3951	BRACKET, Torque (Gr. Dr. Mdls. Only!)
51	2-4455	PAD, Foot Sandpaper (Models: LT120G30BB, LT125G33BB, & ELT125G33BB)
--	2-8203	PAD, Foot, Rubber Deluxe (Models: LT140H33BBV, ELT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV)
52	9-1514	WASHER, 3/8 Flat

**DECALS NOT SHOWN**  
(Shipped Loose in Bag)  
P/N 2-2840, P/N 2-2841  
P/N 2-3008, P/N 2-3009  
P/N 2-6250, P/N 2-6251  
P/N 2-6252, P/N 2-6253  
P/N 2-6254, P/N 2-6255

**TOP VIEW OF BELT GUIDE BRACKET, Part No. 3-5963 (see page 15)**  
(Cutting Deck, Drive and Year of Manufacture Designations Imprinted in Bracket as shown)

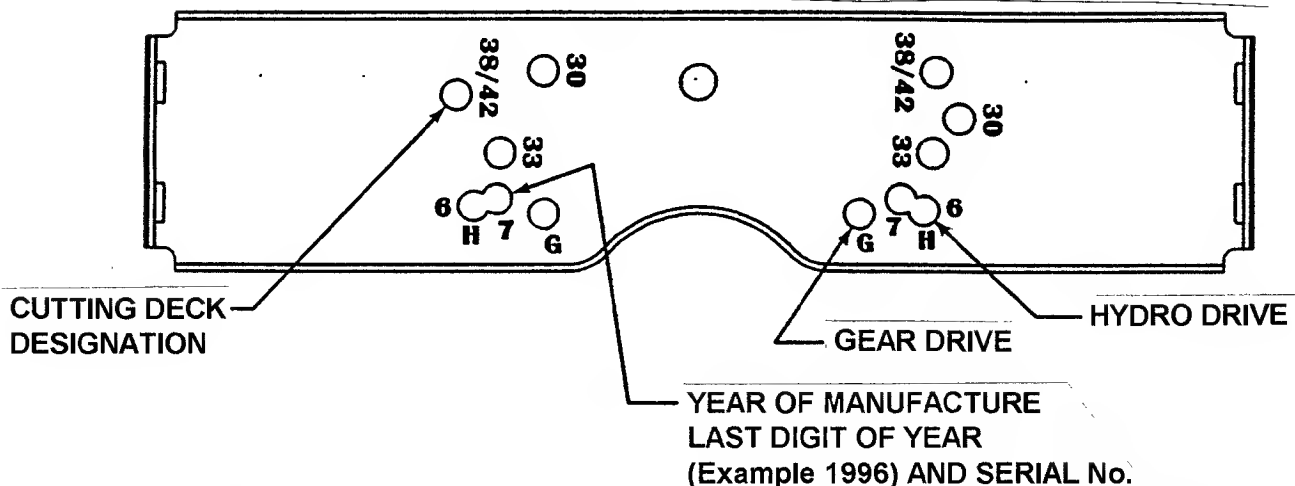

## 30" CUTTING DECK, BELTS, BRAKES

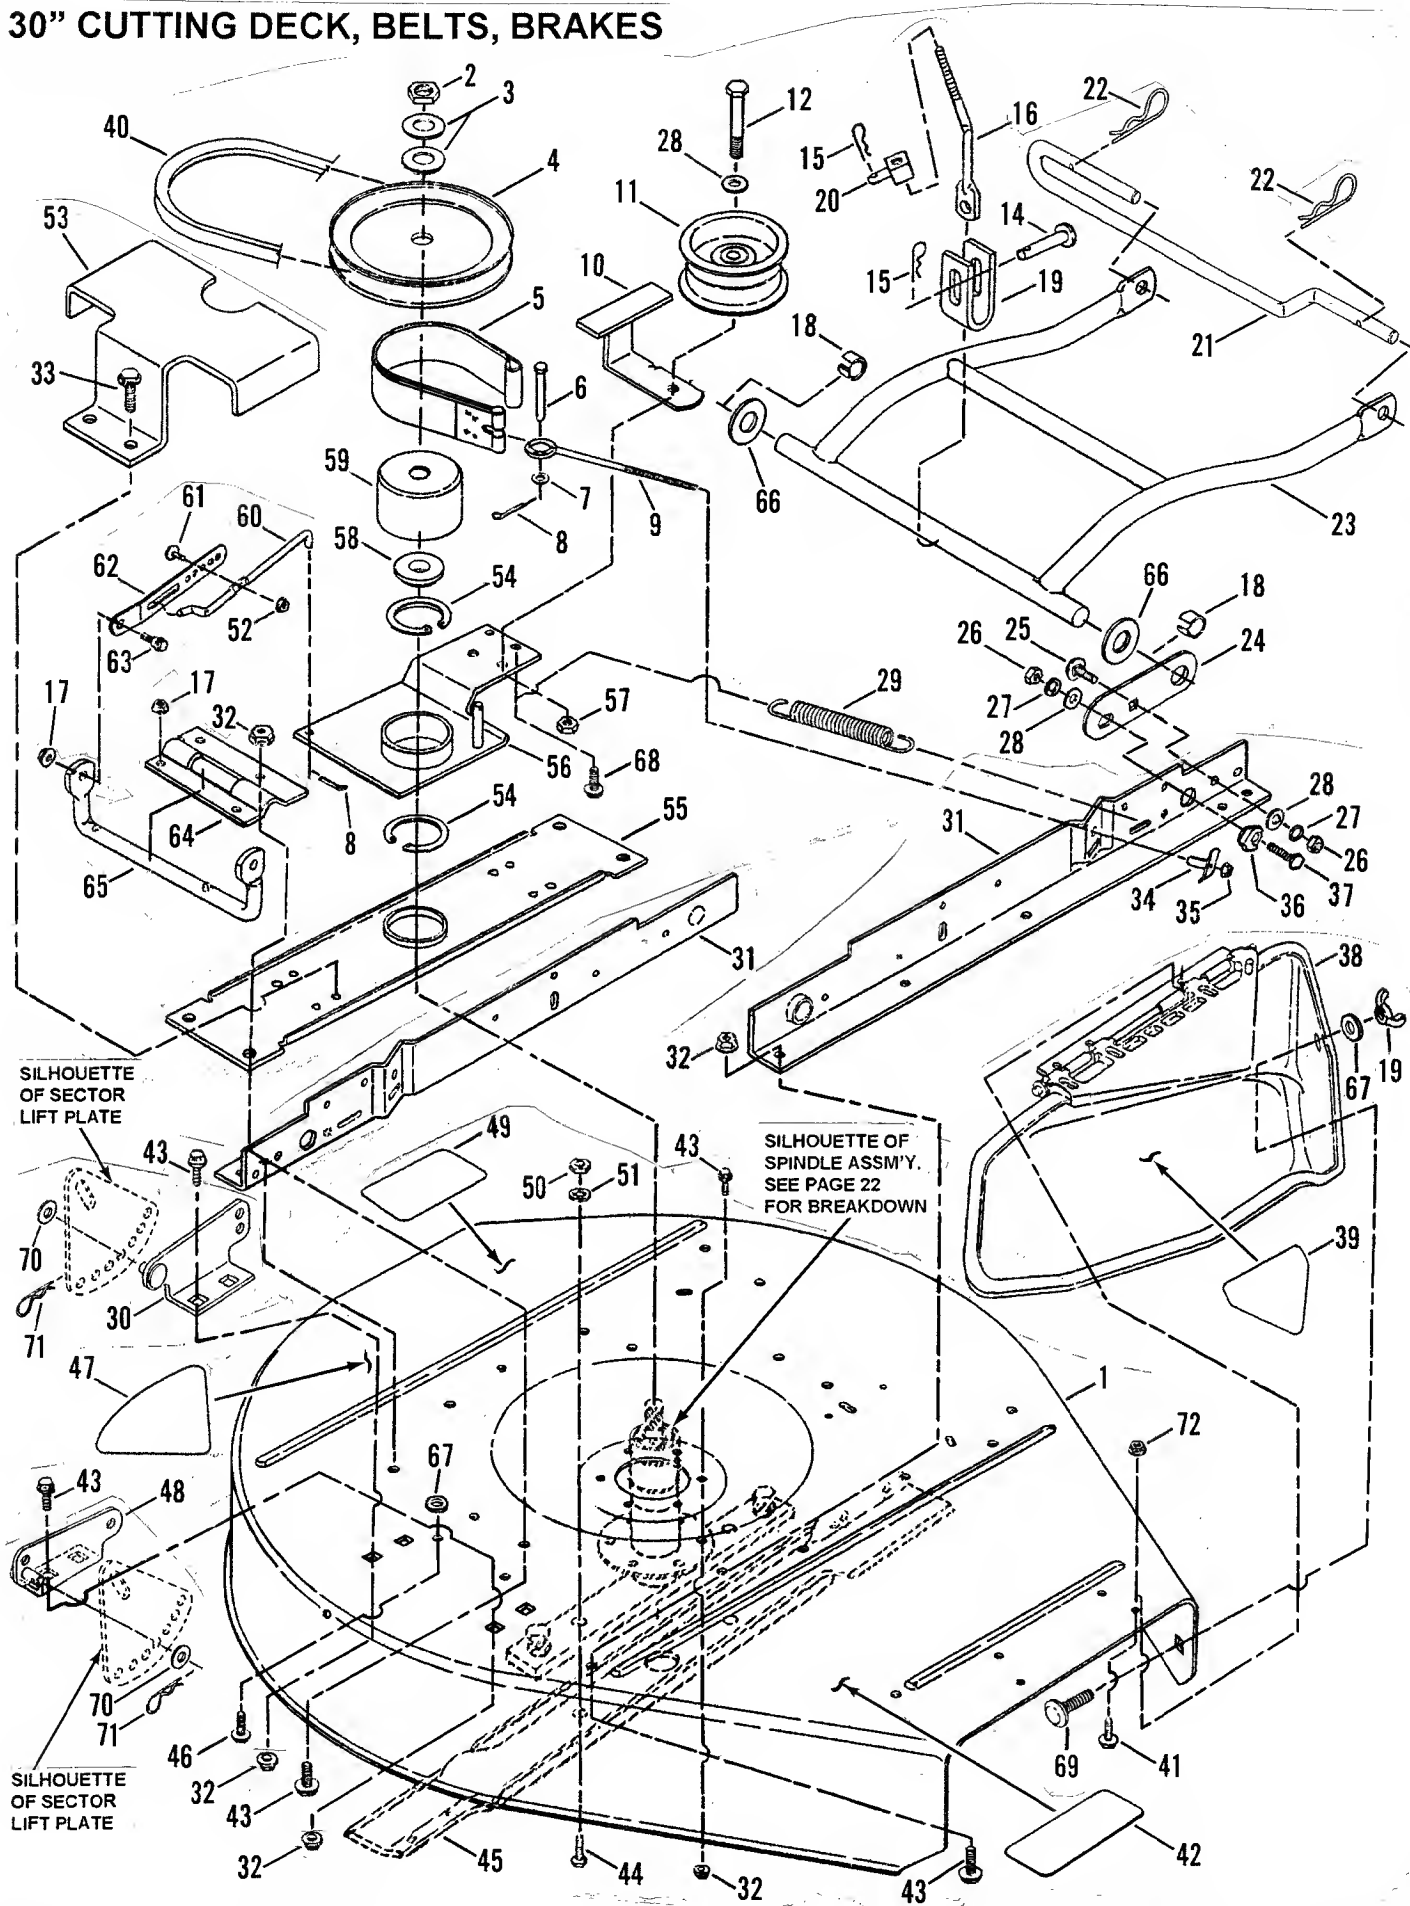

## 30" CUTTING DECK, BELTS, BRAKES

ITEM	PART NO.	DESCRIPTION
1	5-3689	DECK, 30" Cutting (Includes items 42 & 49)
2	1-0027	NUT, 3/4-16 Hex Jam
3	3-2027	WASHER, Flat (2)
4	2-2715	PULLEY, Spindle, 6 1/2" O.D.
5	5-2886	ASSEMBLY, Brake Band
6	1-4304	PIN, 1/4 x 1 1/4" Clevis
7	9-0055	WASHER, Flat
8	9-0037	COTTER-PIN, 3/32 x 3/4" (2)
9	2-2879	BOLT, 1/4-20 Eye
10	4-1487	GUIDE, Belt
11	2-7717	PULLEY, Idler, 3 1/4" O.D.
12	9-1553	SCREW, 3/8-16 x 1 3/4" Hx. Hd. Cap
13	3-3938	BRACKET, Front Lift Hanger
14	1-3460	PIN, 3/8 x 1 1/2" Clevis
15	9-1503	PIN, Hair, 3/32 x 1 19/32" (2)
16	2-6639	ROD, Front Lift
17	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
18	1-2067	RING, Front Lift Arm (2)
19	9-0492	NUT, 5/16-18 Wing
20	2-9694	SWIVEL, Brake
21	2-7471	PIN, Front Deck Hanger
22	9-1596	PIN, .148 x 2.62" Hair (2)
23	4-1141	LIFT, Front Arm
24	3-2432	LINK, Adjustment
25	9-0850	BOLT, 3/8-16 x 3/4" Carriage
26	9-0130	NUT, 3/8-16 Hex (2)
27	9-0118	WASHER, 3/8 Split Lock (2)
28	9-0122	WASHER, Flat, 3/8 SAE (3)
29	1-2264	SPRING, Clutch & Brake
30	4-1258	BRACKET, Rear Deck Lift, Left Side
31	3-3499	RAIL, 30" Cutting Deck (2)
32	9-0613	NUT, 3/8-16 Hex Flange Lock (17)
33	9-0361	SCREW, 5/16-18 x 5/8" S.T. (2)
34	1-4303	T-NUT, 1/4-20 Thread
35	9-0063	NUT, 1/4-20 Hex
36	1-5012	ECCENTRIC, Leveling
37	9-0563	SCREW, 3/8-16 x 1" Hex Hd. Cap
38	5-2553	ASSEMBLY, Deflector (Includes item 39)


ITEM	PART NO.	DESCRIPTION
39	1-3010	DECAL - DANGER (Cut Finger)
40	2-2786	BELT, Drive, 30" Cutting Deck
41	9-1525	BOLT, 5/16-18 x 1/2" Hex Flange Lock (2)
42	1-4852	DECAL - CAUTION
43	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock (17)
44	9-0392	SCREW, 1/2-20 x 1" Hx. Hd. Cap (2)
45	1-8069	BLADE, 30" Cutting Deck
46	9-0595	BOLT, 5/16-18 x 3/4" Hx. Flg. Lk. (2)
47	2-3997	DECAL, 30"
48	4-1252	BRACKET, Rear Deck Lift, Right Side
49	1-6973	DECAL - CAUTION, Rotating Blades
50	9-0559	NUT, 1/2-20 Hex Jam (2)
51	9-0509	WASHER, 1/2 Internal Tooth Lock (2)
52	9-0583	NUT, 1/4-20 Hex Flange Lock (2)
53	3-3918	GUIDE, Belt
54	1-0740	RING, Retaining (2)
55	3-8018	BRACE, Spindle
56	4-1311	ARM, Idler
57	9-1585	NUT, 3/8-16 Hex Center Lock
58	1-4407	WASHER, Spindle
59	3-2169	DRUM, Brake
60	2-4192	ROD, Link, Clutch/Brake
61	9-0584	BOLT, 1/4-20 x 1/2" Hex Flg. Lock
62	3-3586	BRACKET, Link, Clutch/Brake
63	1-5761	SCREW, 5/16-18 x 3/4" Shoulder
64	3-3578	BRACKET, Pivot Arm
65	2-4183	ARM, Pivot
66	3-2027	WASHER, Flat (2)
67	9-0188	WASHER, 5/16 Flat (3)
68	9-0368	SCREW, 5/16-18 x 3/4" Self-Tapping
69	9-1508	BOLT, 5/16-18 x 3/4" Short Neck Carriage
70	9-1514	WASHER, Flat, .41 I.D. x .81 O.D. (2)
71	9-1503	PIN, .093 x 1.50" Hair (2)
72	9-1601	NUT, 5/16-18 Hex Flange Lock

**NOTE: 30" CUTTING DECK USED ON MODEL LT120G30BB ONLY! FOR ORDERING COMPLETE CUTTER UNIT ASSEMBLY, ORDER KIT No. 6-1415.**


**AIR LIFT KIT P.N. 6-0735 AVAILABLE FOR 30" CUTTING DECK INCLUDES:**  
**(2 ea.) P.N. 3-1724 AIR LIFTS**  
**(6 ea.) P.N. 9-0228 SCREWS**  
**(6 ea.) P.N. 9-0391 WASHERS**  
**(6 ea.) P.N. 9-0223 NUTS**  
**(NOT SHOWN)**

# SPINDLE - 30" CUTTING DECK

## ① ASSEMBLY

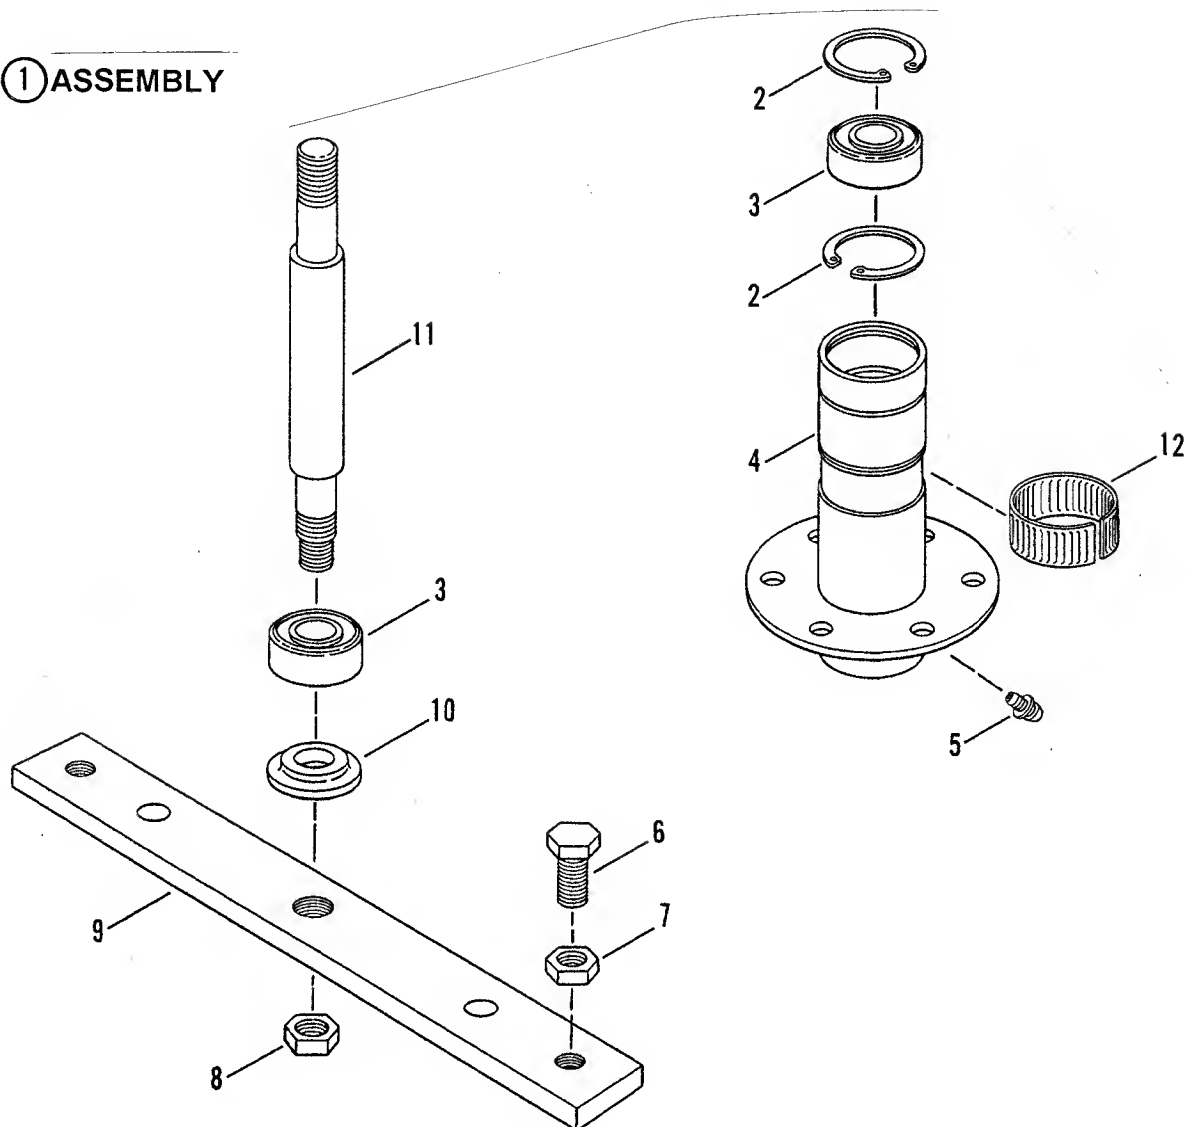


ITEM	PART NO.	DESCRIPTION
1	5-2917	ASSEMBLY, Spindle Housing, 30" Cutting Deck (Model LT120G30BB) (Includes items 2 thru 11)
2	1-2491	RING, Retaining (2)
3	1-3313	BEARING, Spindle (2)
4	5-2294	HOUSING, Spindle (Includes item 5)
5	1-0817	FITTING, Lube
6	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap, Grade 5 (2)
7	9-0559	NUT, 1/2-20 Hex Jam (2)
8	9-0356	NUT, 5/8-18 Hex Lock
9	3-7751	HOLDER, Blade
10	1-4407	WASHER, Spindle
11	2-4687	SPINDLE
12	1-2670	RING, Tolerance

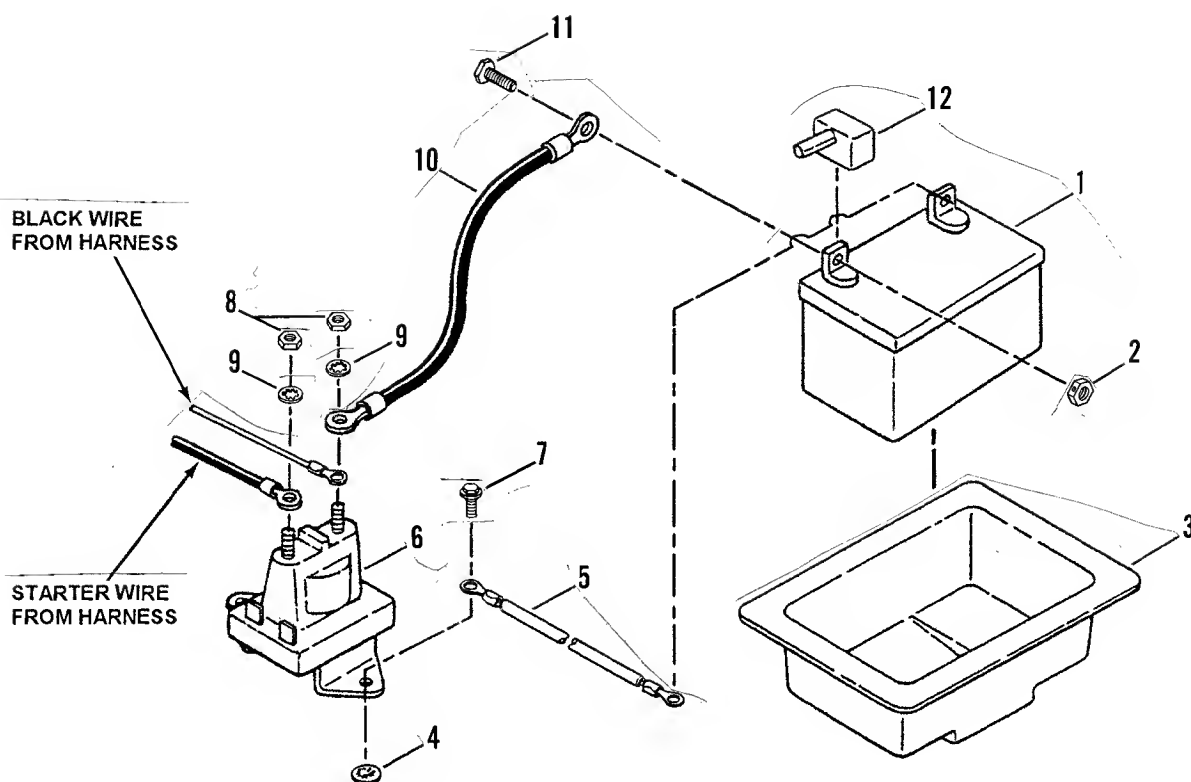

ITEM	PART NO.	DESCRIPTION
1	6-0618	KIT, Battery (Includes Decal P.N. 1-6134 & Battery Without Acid)
2	9-0372	NUT, 1/4-20 Hex Center Lock (2)
3	1-7853	TRAY, Battery
4	1-2485	RETAINER, Screw
5	2-6414	CABLE, Ground (Black)
6	1-8604	SOLENOID
7	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (2)
8	9-0977	NUT, 1/4-20 Hex Jam (2)
9	9-1314	WASHER, 1/4 Internal Tooth Lock (2)
10	1-4476	CABLE, Positive (Red)
11	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
12	1-2444	COVER, Positive Terminal

# 33" CUTTING DECK, BELTS, BRAKES

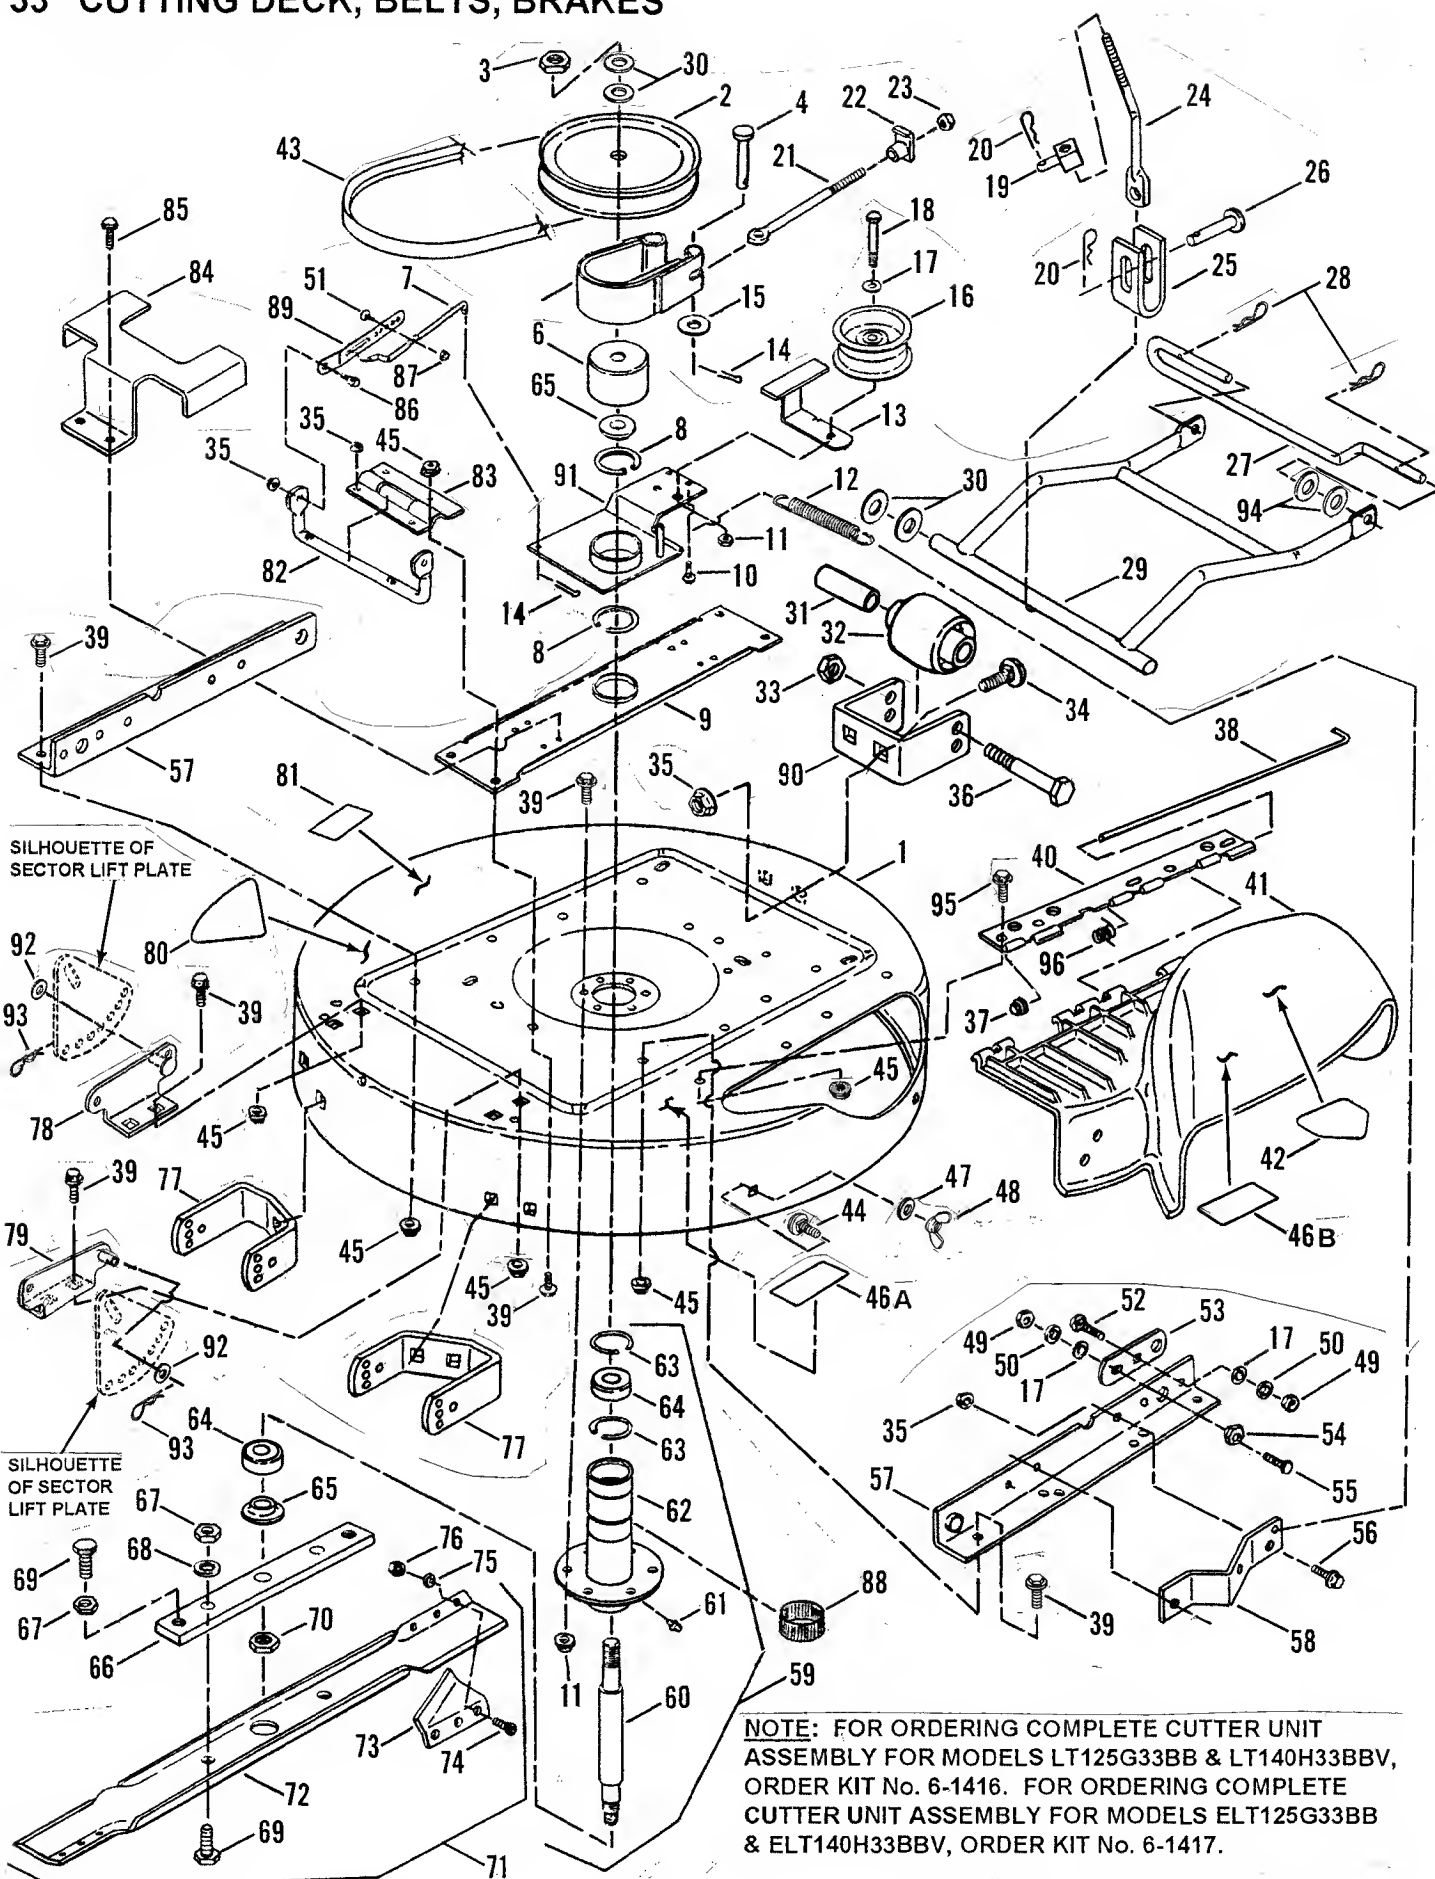



# 33" CUTTING DECK, BELTS, BRAKES


## ITEM PART NO. DESCRIPTION

1A	5-3690	ASSEMBLY, Deck, 33" Cutting (Includes items 46A & 81) (Mdl's. LT125G33BB & LT140H33BBV)
1B	5-3693	ASSEMBLY, Deck, 33" Cutting (Includes items 46B & 81) (Models: ELT125G33BB & ELT140H33BBV)
2	2-6558	PULLEY, Spindle, 7" O.D.
3	1-0027	NUT, 3/4-16 Hex Jam
4	1-4304	PIN, 1/4 x 1 1/4" Clevis
5	5-2886	ASSEMBLY, Brake Band
6	3-2169	DRUM, Brake
7	2-4192	ROD, Link, Clutch/Brake
8	1-0740	RING, Retaining (2)
9	3-8018	BRACE, Spindle
10	9-0368	SCREW, 5/16-18 x 3/4" Self-Tapping
11	9-1585	NUT, 3/8-16 Hex Center Lock
12	1-2264	SPRING, Clutch & Brake
13	4-1487	GUIDE, Belt
14	9-0037	COTTER-PIN, 3/32 x 3/4" (2)
15	9-0055	WASHER, Flat
16	2-7717	PULLEY, Idler, 4" O.D.
17	9-0122	WASHER, 3/8 SAE Flat (3)
18	9-1553	SCREW, 3/8-16 x 1 3/4" Hx. Hd. Cap.
19	2-9694	SWIVEL, Brake
20	1-2431	PIN, 1/4 x 1 1/8" Hair (2)
21	2-6677	BOLT, 1/4-20 Eye
22	1-4303	NUT, 1/4-20 Tee
23	9-0063	NUT, 1/4-20 Hex
24	2-6639	ROD, Front Lift
25	3-3938	BRACKET, Front Lift Hanger
26	1-3460	PIN, 3/8 x 1 1/2" Clevis
27	2-7471	PIN, Front Deck Hanger
28	9-1596	PIN, Hair, .148 x 2.62" (2)
29	4-1495	LIFT, Front Arm
30	3-2028	WASHER, Flat (4)
31	1-5272	SPACER (3)
32	1-9190	WHEEL, Gage (3)
33	9-1600	NUT, 3/8-24 Hex Center Lock (3)
34	9-0004	BOLT, 5/16-18 x 1/2" Short Neck Carriage (6)
35	9-0585	NUT, 5/16-18 Hex Flange Lock (9)
36	9-1532	SCREW, 3/8-24 x 3 3/4" Hex Head Cap, Grade 5 (3)
-	5-2555	ASSEMBLY, Deflector (Includes items 37, 38, 40, 41, 42, & 96)
37	2-6483	PAL-NUT, 1/4 Hex
38	2-6234	PIN, Hinge
39	9-0612	BOLT, 3/8-16 x 3/4" Hx. Flge. Lk. (15)
40	3-3780	HINGE, Deflector
41	2-6233	DEFLECTOR, Discharge
42	2-6831	DECAL, Danger (Cut Finger)
43	2-6546	BELT, Drive, 33" Cutting Deck
44	9-1508	BOLT, 5/16-18 x 3/4" Short Neck Carriage, Grade 5
45	9-0613	NUT, 3/8-16 Hex Flange Lock (18)
46A	1-4852	DECAL - CAUTION, Deflector (Models LT125G33BB & LT140H33BBV)
46B	2-2841	DECAL - CAUTION, Deflector (Models ELT125G33BB & ELT140H33BBV)
47	9-1296	WASHER, 5/16 Flat (2)

## ITEM PART NO. DESCRIPTION

48	9-0492	NUT, 5/16-18 Wing
-	9-1511	NUT, 5/16-18 Hex, Grade 5 (Euro Models Only!)
49	9-0130	NUT, 3/8-16 Hex (2)
50	9-0118	WASHER, 3/8 Split Lock (2)
51	9-0584	BOLT, 1/4-20 x 1/2" Hex Flange Lock
52	9-0850	BOLT, 3/8-16 x 3/4" Carriage
53	3-2432	LINK, Adjustment
54	1-5012	ECCENTRIC, Leveling
55	9-0563	SCREW, 3/8-16 X 1" Hex Head Cap
56	9-0721	BOLT, 5/16-18 x 1/2" Hex Flange Lock (4)
57	3-8453	RAIL, Side (2)
58	3-3952	ANCHOR, Brake
59	5-2917	ASSEMBLY, Spindle (Includes items 60 thru 70)
60	2-4687	SPINDLE
61	1-0817	FITTING, Lube
62	5-2294	HOUSING, Spindle (Incl. item 61)
63	1-2491	RING, Retaining (2)
64	1-3313	BEARING, Spindle (2)
65	1-4407	WASHER, Spindle (2)
66	3-7751	HOLDER, Blade
67	9-0559	NUT, 1/2-20 Hex Jam (4) (2 in assembly)
68	9-0509	WASHER, 1/2 Int. Tooth Lock (2)
69	9-0392	SCREW, 1/2-20 Hex Head Cap (4) (2 in assembly)
70	9-0356	NUT, 5/8-18 Hex Lock
71	5-7482	ASSEMBLY, Blade & Air Lift (Includes items 72 thru 76)
72	1-9523	BLADE, 33" Cutting Deck
73	3-7723	AIR-LIFT (2)
-	3-4468	AIR-LIFT (2) (Euro Models Only!)
74	9-0228	SCREW, 5/16-24 x 11/16" Machine (6)
75	9-0391	WASHER, 5/16 Int. Tooth Lock (6)
76	9-0223	NUT, 5/16-24 Hex (6)
77	3-3571	BRACKET, Gage Wheel (Rear) (2)
78	4-1258	BRACKET, Rear Deck Lift, Left Side
79	4-1252	BRACKET, Rear Deck Lift, Right Side
80	2-2991	DECAL, 33" Hi-Vac
81	1-6973	DECAL - CAUTION (Rotating Blades)
82	2-4183	ARM, Pivot
83	3-3578	BRACKET, Pivot Arm
84	3-3926	GUIDE, Belt
85	9-0361	SCREW, 5/16-18 x 5/8" Self-Tap. (2)
86	1-5761	SCREW, 5/16-18 x 3/4" Shoulder
87	9-0583	NUT, 1/4-20 Hex Flange Lock
88	1-2670	RING, Tolerance
89	3-3586	BRACKET, Link, Clutch/Brake
90	3-3570	BRACKET, Gage Wheel (Front)
91	4-1311	ARM, Idler
92	9-1514	WASHER, Fl., .406 I.D. x .812 O.D. (2)
93	9-1503	PIN, Hair, .093 x 1.50" (2)
94	9-1587	WASHER, Flat (2)
95	9-1588	BOLT, 3/8-16 x 3/4" Hex Flange Lock, Grade 5 (3)
96	1-6341	SPRING, Hinge

# 38" CUTTING DECK, BELTS, BRAKES

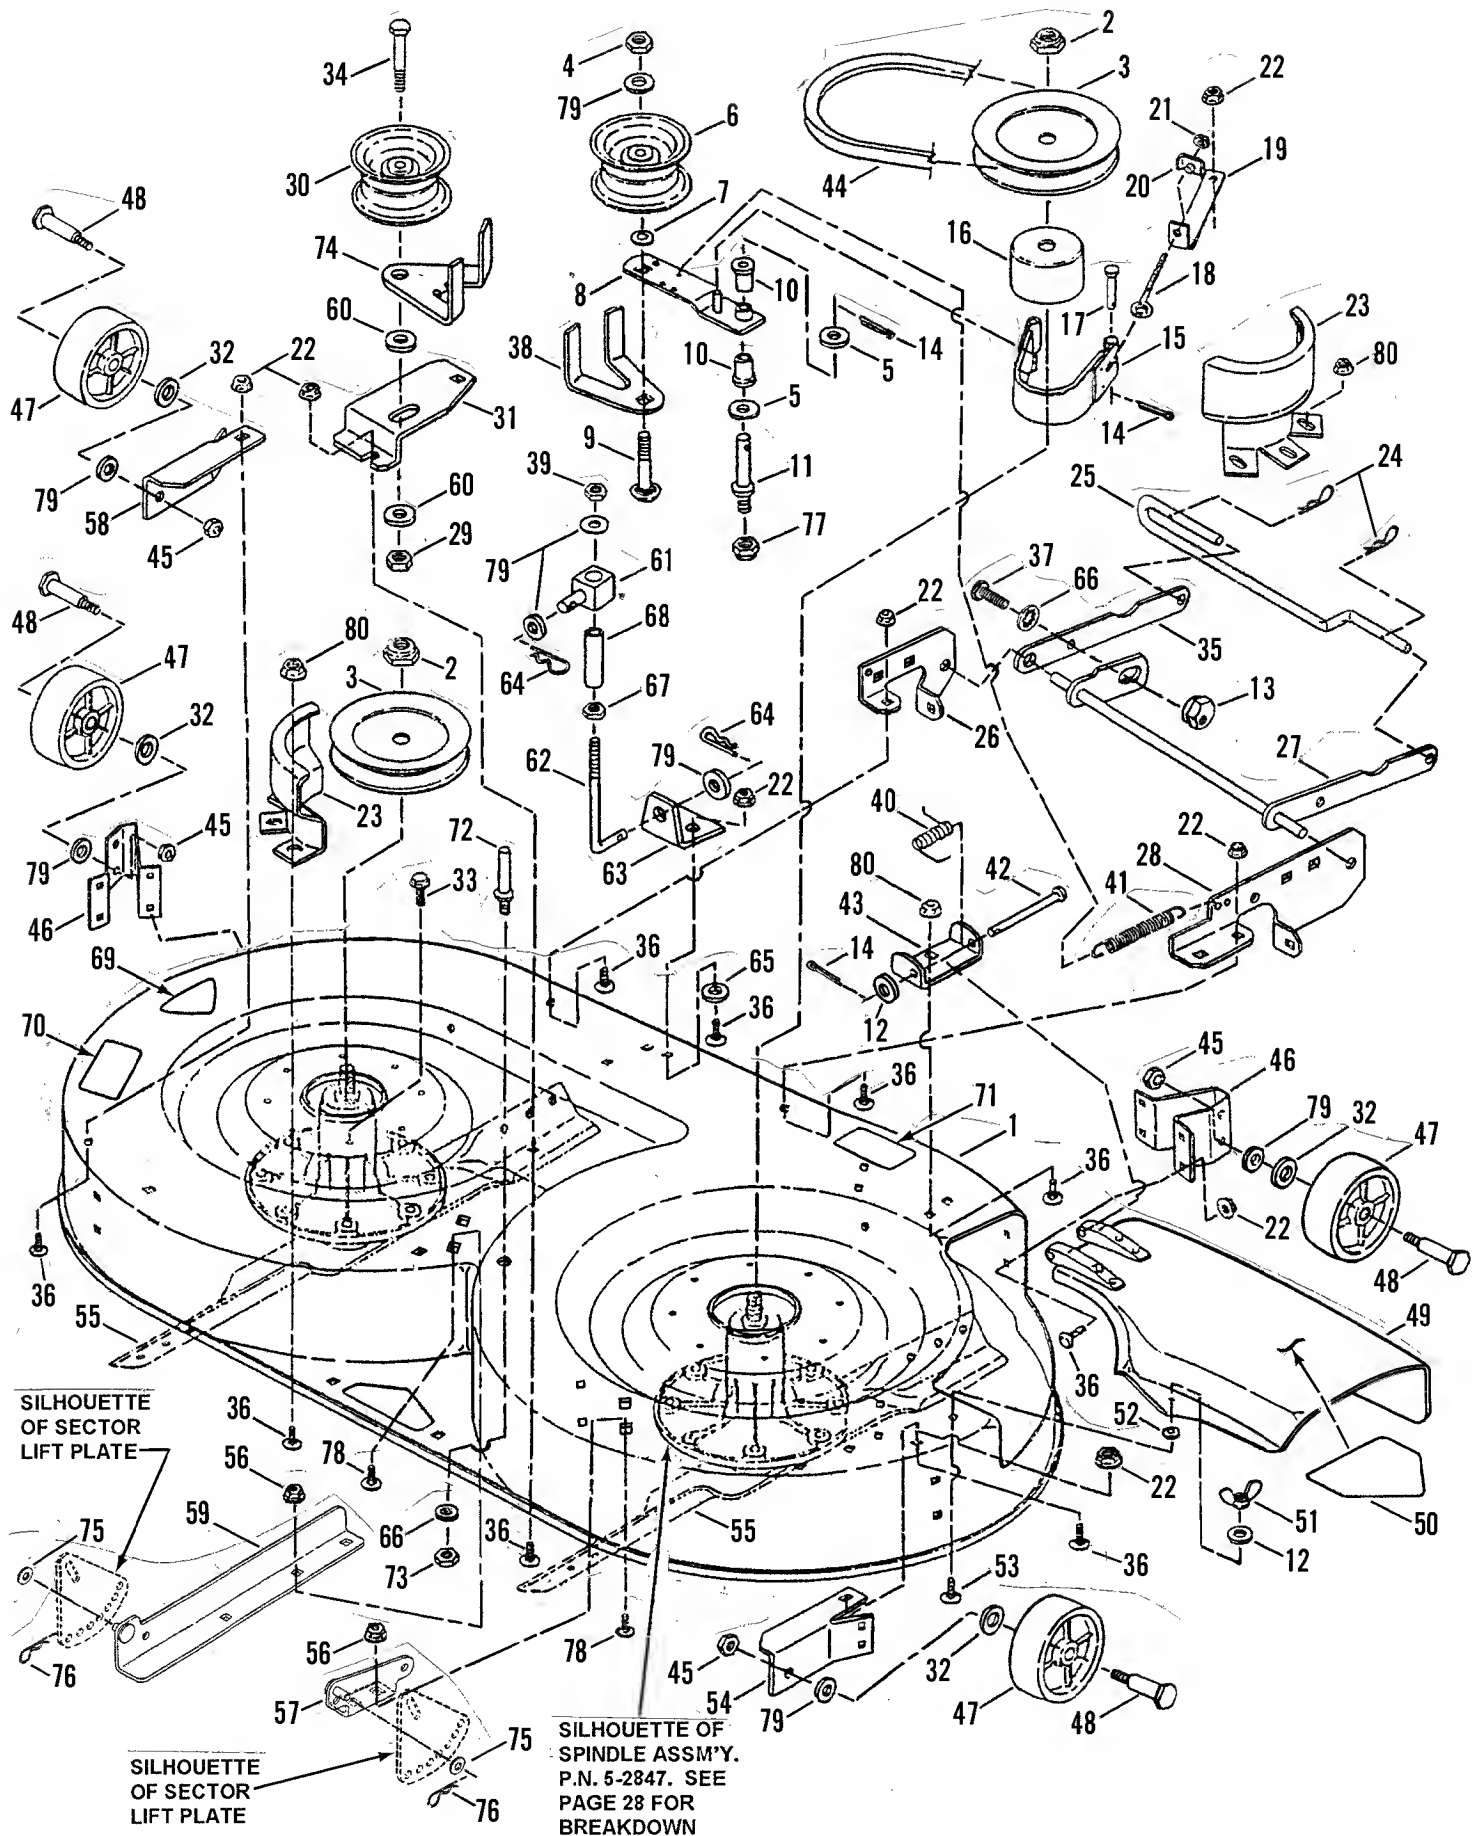


# 38" CUTTING DECK, BELTS, BRAKES

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-3691	ASSEMBLY, Deck, 38" Cutting (Includes items 70 & 71)	42	2-6161	PIN, 5/16 x 3 3/16" Clevis
2	9-1006	NUT, 5/8-16 Hex Nyloc (2)	43	2-6750	HINGE, Chute Deflector
3	2-7792	PULLEY, Spindle (2)	44	2-5042	BELT, Drive, 38" Cutting Deck
4	7-6979	NUT, 3/8-16 Hex Nyloc (2)	45	9-0289	NUT, 3/8-24 Hex Lock (4)
5	9-0122	WASHER, 3/8 Flat (2)	46	3-3756	BRACKET, Gage Wheel, Front (2)
6	2-4725	PULLEY, Idler	47	2-6122	WHEEL, Gage (4)
7	1-3847	RETAINER, 3/8 Bolt	48	9-1526	BOLT, 3/8-24 Shoulder (4)
8	4-1392	ARM, Idler Pulley	49	5-3226	ASSEMBLY, Chute Deflector (Includes 1 each item 12 & 14, & items 40, 42, 43, & 50)
9	9-0738	BOLT, 3/8-16 x 2 3/4" Short Neck Carriage, Grade 5	50	2-6831	DECAL, Danger
10	1-2306	BUSHING, Flange (2)	51	9-0492	NUT, 5/16-18 Wing
11	2-6618	STUD, Idler	52	1-1791	RETAINER, 5/16 Bolt
12	9-1296	WASHER, Flat (2)	53	9-1508	BOLT, 5/16-18 x 3/4" Short Neck Carriage, Grade 5
13	1-5447	ECCENTRIC, Leveling	54	3-3890	BRACKET, Wheel (Right Side)
14	9-1597	COTTER-PIN, 3/32 x 3/4" (3)	55	2-4466	BLADE, 38" Cutting Deck (2)
15	5-2886	ASSEMBLY, Brake Band	56	9-0613	NUT, 3/8-16 Hex Flange Lock (4)
16	3-3816	DRUM, Brake	57	4-1259	BRACKET, Rear Deck Lift (Right Side)
17	1-4304	PIN, 1/4 x 1 5/8" Clevis	58	3-3891	BRACKET, Wheel (Left Side)
18	1-4302	BOLT, 1/4-20 Eye	59	4-1257	BRACKET, Rear Deck Lift (Left Side)
19	3-3825	ANCHOR, Blade Brake	60	9-1152	WASHER, .406 I.D. x 1.50 O.D. x .20 (2)
20	2-4908	NUT, 1/4-20 "T" Lock	61	2-6648	SWIVEL, Lift
21	9-0063	NUT, 1/4-20 Hex	62	2-9718	BOLT, "J"
22	9-0585	NUT, 5/16-18 Hex Flange Lock (24)	63	2-6634	BRACKET, Angle (Front)
23	2-4801	GUARD, Belt (2)	64	9-1310	PIN, Hair (2)
24	9-1596	PIN, Hair (2)	65	9-0500	WASHER, 7/16 Flat
25	2-7471	PIN, Deck Hanger	66	9-0390	WASHER, 3/8 Internal Tooth Lk.
26	2-6757	BRACKET, Front Lift Arm (Left Side)	67	9-1302	NUT, 3/8-16 Hex, Grade 5
27	4-1371	LIFT, Front Arm	68	2-6649	SPACER, Lift
28	2-8365	BRACKET, Front Lift Arm (Right Side)	69	2-6154	DECAL, 38"
29	9-1325	NUT, 1/2-13 Hex Nyloc	70	1-6973	DECAL - CAUTION (Rotating Blades)
30	2-6310	PULLEY, Idler	71	1-4852	DECAL - CAUTION
31	3-3728	BRACKET, Idler	72	1-4583	STOP, Deck
32	9-1587	WASHER, 1/2 Flat (4)	73	9-0155	NUT, 3/8-24 Hex
33	9-0815	SCREW, 3/8-16 x 3/4" Self- Tapping (10)	74	3-4045	GUIDE, Belt
34	9-1558	BOLT, 1/2-13 x 3 1/2" Hx. Hd. Cap	75	9-1514	WASHER, Flat, .406 I.D. x .812 O.D. (2)
35	3-3751	ARM, Front Lift	76	9-1503	PIN, Hair, .093 x 1.50" (2)
36	9-0799	BOLT, 5/16-18 x 5/8" Short Neck Carriage (29)	77	1-1201	NUT, 5/16-24 Hex Lock
37	9-0163	SCREW, 3/8-24 x 1 1/4" Hex Head Cap, Grade 2	78	9-0850	BOLT, 3/8-16 x 3/4" Carriage
38	3-3929	GUIDE, Belt	79	9-1514	WASHER, Flat
39	9-1585	NUT, 3/8-16 Hex Center Lock	80	9-1601	NUT, 5/16-18 Hex Lock, Gr. 5 (7)
40	2-6158	SPRING, Chute Deflector Hinge			
41	2-6173	SPRING, Blade Brake			


**NOTE: 38" CUTTING DECK USED  
ON MODELS LT140H38BBV &  
LT150H38BBV ONLY! FOR ORDERING  
COMPLETE CUTTER UNIT ASSEMBLY,  
ORDER KIT No. 6-1418.**

# SPINDLE - 38" CUTTING DECK

## ① ASSEMBLY

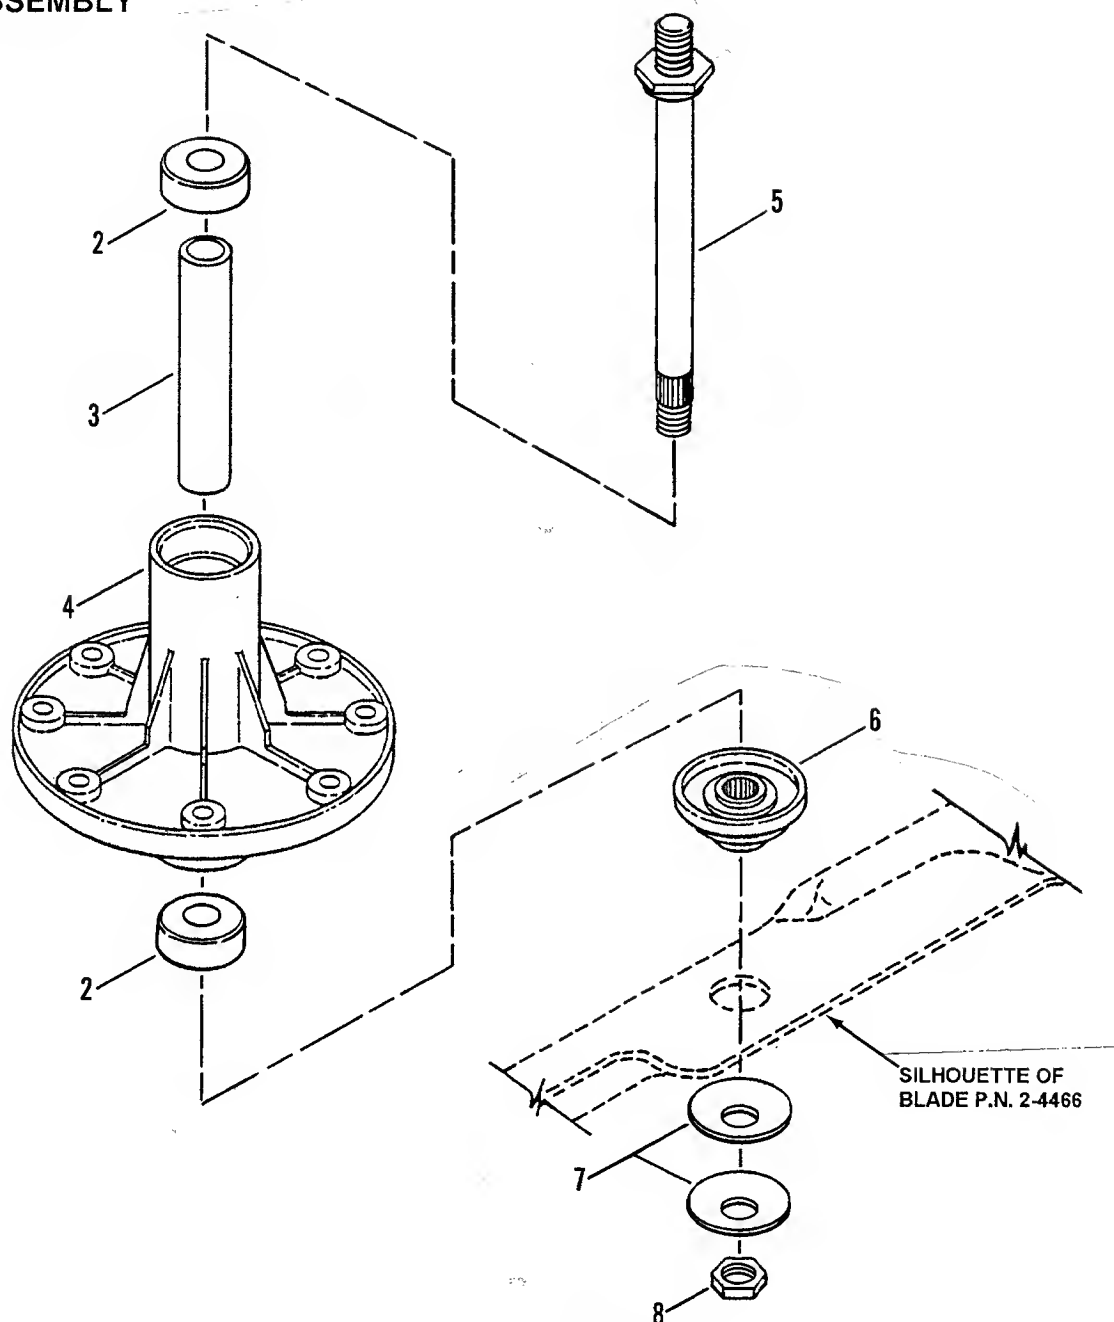


ITEM	PART NO.	DESCRIPTION
1	5-2847	ASSEMBLY, Spindle Housing, 38" Cutting Deck (Models LT140H38BBV & LT150H38BBV) (Includes items 2 thru 8)
2	2-6808	BEARING, Spindle (2)
3	2-4465	SPACER, Spindle Housing
4	2-4461	HOUSING, Spindle
5	2-6754	SPINDLE
6	2-4463	SPACER, Blade
7	2-4467	WASHER, Belleville, 19/32" I.D. x 1 3/4" O.D. (2)
8	9-1633	NUT, 9/16-18 Hex Jam

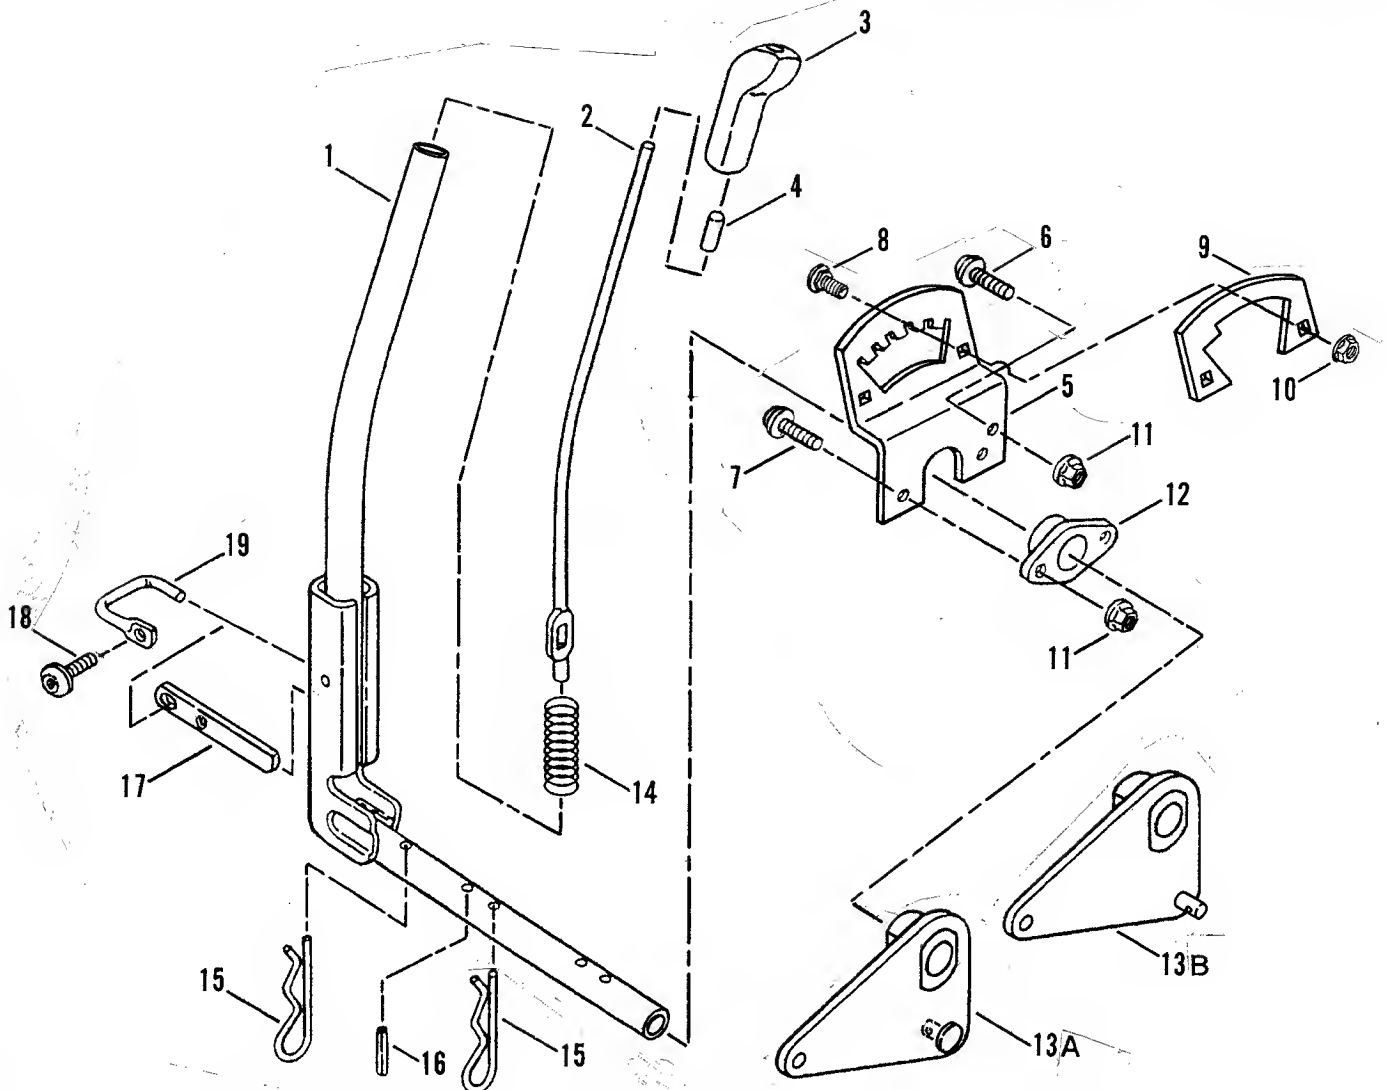

ITEM	PART NO.	DESCRIPTION
1	4-1015	LEVER, Implement Lift (Models: LT120G30BB, LT140H38BBV, & LT150H38BBV)
—	4-1655	LEVER, Implement Lift (Models: LT125G33BB, ELT125G33BB, LT140H33BBV, ELT140H33BBV, & LT155H42BBV)
2	2-2565	ROD, Lift Lever
3	1-9363	KNOB, Lift Lever
4	1-4361	CAP, Lift Lever Rod
5	3-3449	QUADRANT, Lift Lever
6	9-1001	SCREW, 5/16-18 x 5/8" Truss Head (Torx)
7	9-1000	SCREW, 5/16-18 x 7/8" Truss Head (Torx) (2)
8	9-0005	BOLT, 1/4-20 x 1/2" Short Neck Carriage (2)
9	3-4559	DETENT, Highcut Lockout (Euro Models Only!)
10	9-0583	NUT, 1/4-20 Hex Flange Lock (2)
11	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
12	2-2567	PIVOT, Lift Lever
13A	4-1254	BELLCRANK, Lift Lever (Models: LT125G33BB, ELT125G33BB, ELT140H33BBV, & LT140H33BBV)
13B	4-1255	BELLCRANK, Lift Lever (Models: LT120G30BB, LT140H38BBV, LT150H38BBV, & LT155H42BBV)
14	2-2566	SPRING
15	1-3844	PIN, Hair, 5/32 x 2 5/8" (2)
16	2-2895	PIN, Dowel, 1/4 x 1 1/8"
17	2-2568	DETENT, Latch
18	9-0999	SCREW, 1/4-20 x 5/8" Truss Head (Torx)
19	2-4742	LATCH, Pivot

# 42" CUTTING DECK (Belt, Blade Brake Shown On Page 32)

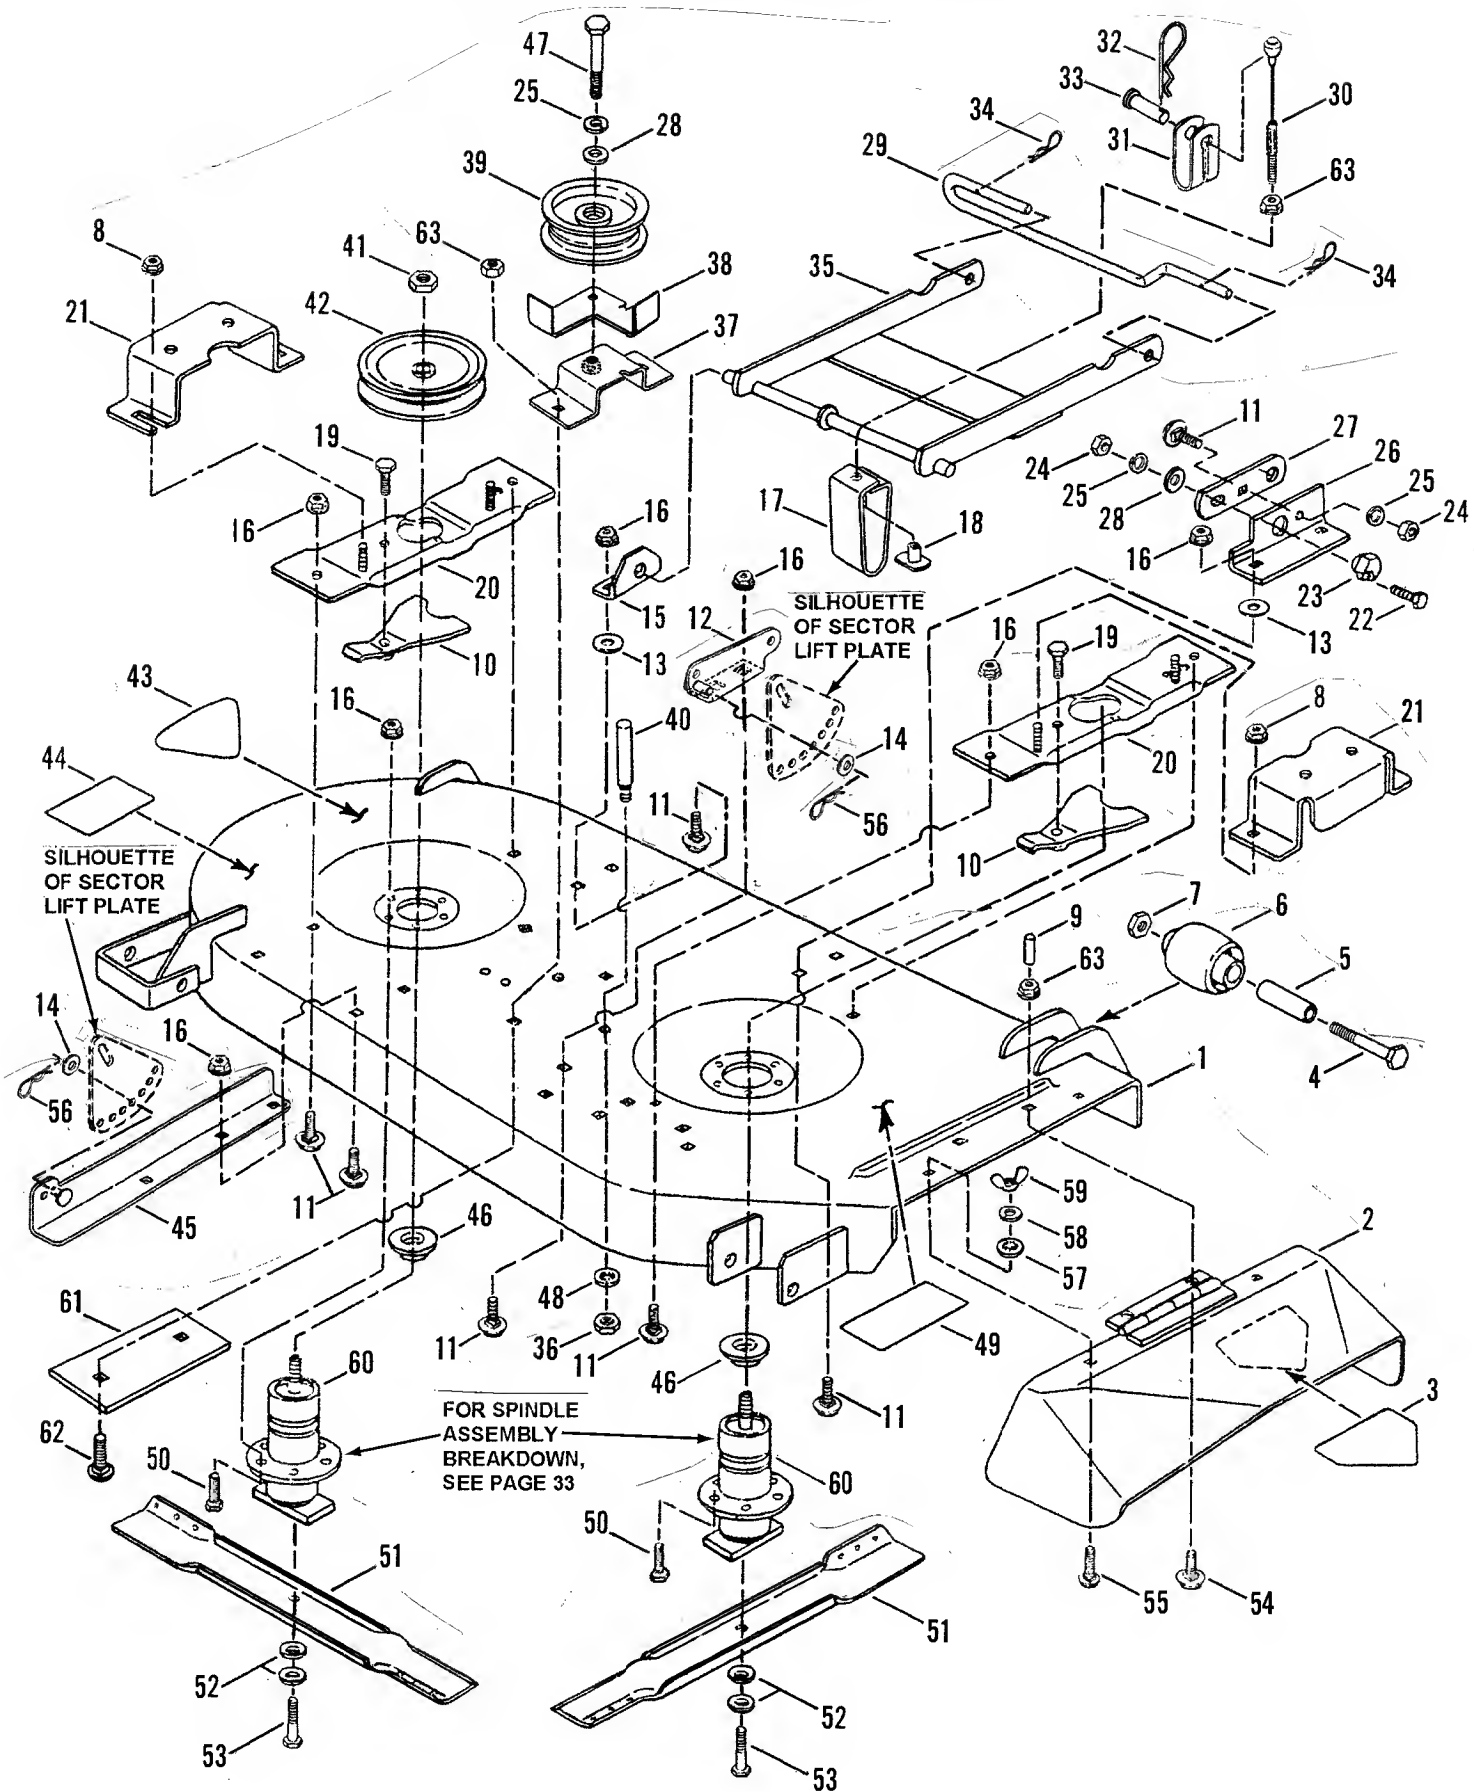


## 42" CUTTING DECK (Belt, Blade Brake Shown On Page 32)

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-3692	ASSEMBLY, Deck, 42" Cutting (Includes items 44 & 49)	36	9-0155	NUT, 3/8-24 Hex
2	5-1401	DEFLECTOR, Side Discharge (Includes item 3)	37	5-3567	BRACKET, Idler
3	1-3010	DECAL - DANGER	38	3-4041	GUIDE, Belt
4	9-1532	SCREW, 3/8-24 x 3 3/4" Hex Head Cap (4)	39	1-8574	PULLEY, Idler
5	1-5272	SPACER (4)	40	1-4583	STUD, Idler
6	1-9190	WHEEL, Gage (4)	41	1-0027	NUT, 3/4-16 Hex Jam (2)
7	9-1600	NUT, 3/8-24 Hex Center Lock, Grade 5 (4)	42	2-4863	PULLEY, Spindle (2)
8	9-0585	NUT, 5/16-18 Hex Flange Lock (10)	43	2-4910	DECAL, 42" Deck
9	2-3606	CAP, Vinyl (2)	44	1-6973	DECAL - CAUTION (Rotating Blades)
10	5-1747	ASSEMBLY, Spindle Lock (2)	45	4-1253	BRACKET, Deck Lift (Left Side)
11	9-0850	BOLT, 3/8-16 x 3/4" Carriage (10)	46	1-4407	WASHER, Spindle (2)
12	4-1252	BRACKET, Lift (Right Side)	47	9-0167	BOLT, 3/8-24 x 2" Hex Head Cap, Grade 5
13	9-0600	WASHER, Flat (4)	48	9-0390	WASHER, 3/8 Internal Tooth Lock
14	9-1514	WASHER, Flat, .406 I.D. x .812 O.D. (2)	49	1-4852	DECAL - CAUTION (Deflector in Place)
15	3-2297	BRACKET, Front Hanger (Left Side)	50	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange
16	9-0613	NUT, 3/8-16 Hex Flange Lock (15)	51	2-6691	BLADE, 21" Cutter (2)
17	3-8043	BRACKET, Front Lift Arm Hanger	52	1-2063	WASHER, Cone, 13/32 x 1 13/32" Diameter (4)
18	9-1567	T-NUT, 5/16-18	53	9-0824	SCREW, 3/8-24 x 1 1/4" Hex Head Cap, Grade 5 (2)
19	9-0582	BOLT, 3/8-16 x 1" Hex Flange Lock (2)	54	9-1303	BOLT, 5/16-18 x 1" Short Neck Carriage, Grade 5 (2)
20	5-2487	ASSEMBLY, Spindle Brace (2)	55	9-0799	BOLT, 5/16-18 x 5/8" Carriage (2)
21	3-4409	GUARD, Pulley (2)	56	9-1503	PIN, Hair, .093 x 1.50" (2)
22	9-0563	SCREW, 3/8-16 x 1" Hex Head Cap	57	1-1791	RETAINER, 5/16 Bolt (2)
23	1-5012	ECCENTRIC, Leveling	58	9-1315	WASHER, 5/16 Split Lock (2)
24	9-0130	NUT, 3/8-16 Hex (2)	59	9-1537	WING-NUT, 5/16-18 (2)
25	9-0118	WASHER, 3/8 Split Lock (3)	60	5-9723	ASSEMBLY, Spindle (2)
26	3-8382	BRACKET, Front (Right Side)	61	3-4202	PLATE, Support
27	3-2432	LINK, Adjustment	62	9-0636	SCREW, 5/16-18 x 1" Hex Head Cap, (2)
28	9-0122	WASHER, 3/8 Flat (2)	63	9-1601	NUT, 5/16-18 Hex Flange Lock Grade 5 (3)
29	2-7471	PIN, Deck Hanger			
30	2-2893	CABLE, Deck Lift			
31	3-2276	CLEVIS, Lift Cable			
32	9-1503	PIN, Hair, 3/32 x 1 1/2"			
33	2-9687	PIN, Clevis, 3/8 x 1 1/16"			
34	9-1596	PIN, Hair, .148 x 2.62" (2)			
35	4-1480	ASSEMBLY, Front Hanger			

**NOTE: 42" CUTTING DECK USED  
ON MODEL LT155H42BBV ONLY!  
FOR ORDERING COMPLETE CUTTER  
UNIT ASSEMBLY, ORDER KIT No. 6-1419.**


# BELT, BLADE BRAKE - 42" CUTTING DECK

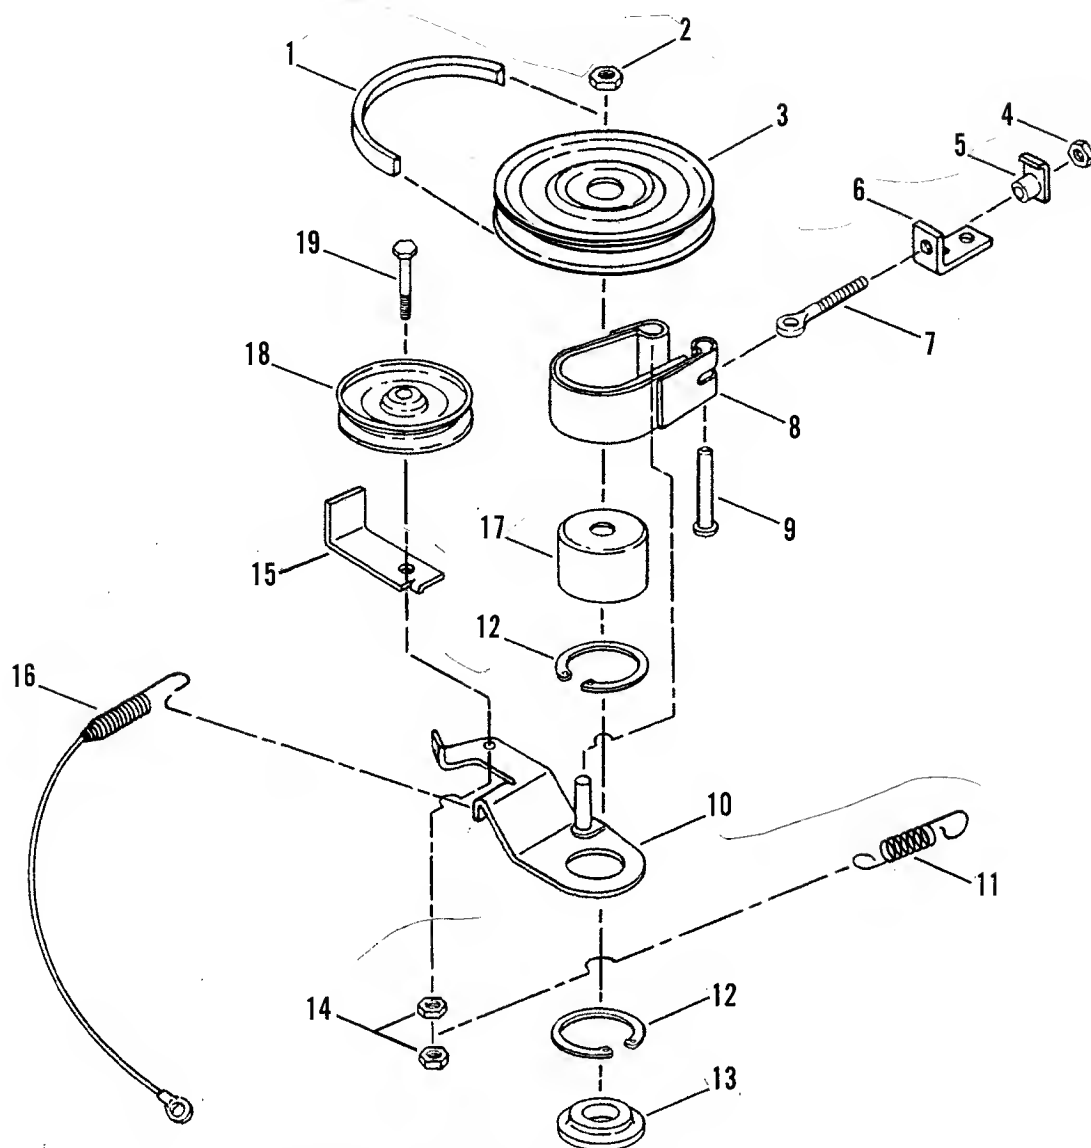

ITEM	PART NO.	DESCRIPTION
1	2-7737	BELT, Drive
2	1-0027	NUT, 3/4-16 Hex Jam
3	2-4863	PULLEY, Drive
4	9-0063	NUT, 1/4-20 Hex
5	1-4303	TEE-NUT, 1/4-20
6	3-2587	ANCHOR, Brake
7	1-4302	BOLT, 1/4-20 Eye
8	5-2886	ASSEMBLY, Brake Band
9	1-1021	PIN, Clevis, 1/4 x 1 1/4"
10	4-7912	ASSEMBLY, Brake Arm
11	2-9788	SPRING, Blade Brake
12	1-0740	RING, Retaining (2)
13	1-4407	WASHER, Spindle
14	9-1600	NUT, 3/8-24 Hex Center Lock, Grade 5 (2)
15	3-4043	GUIDE, Belt
16	2-8368	CABLE, Blade
17	3-2169	DRUM, Brake
18	1-8574	PULLEY, Idler
19	9-0167	SCREW, 3/8-24 x 2" Hex Head Cap




# SPINDLE ASSEMBLY - 42" CUTTING DECK

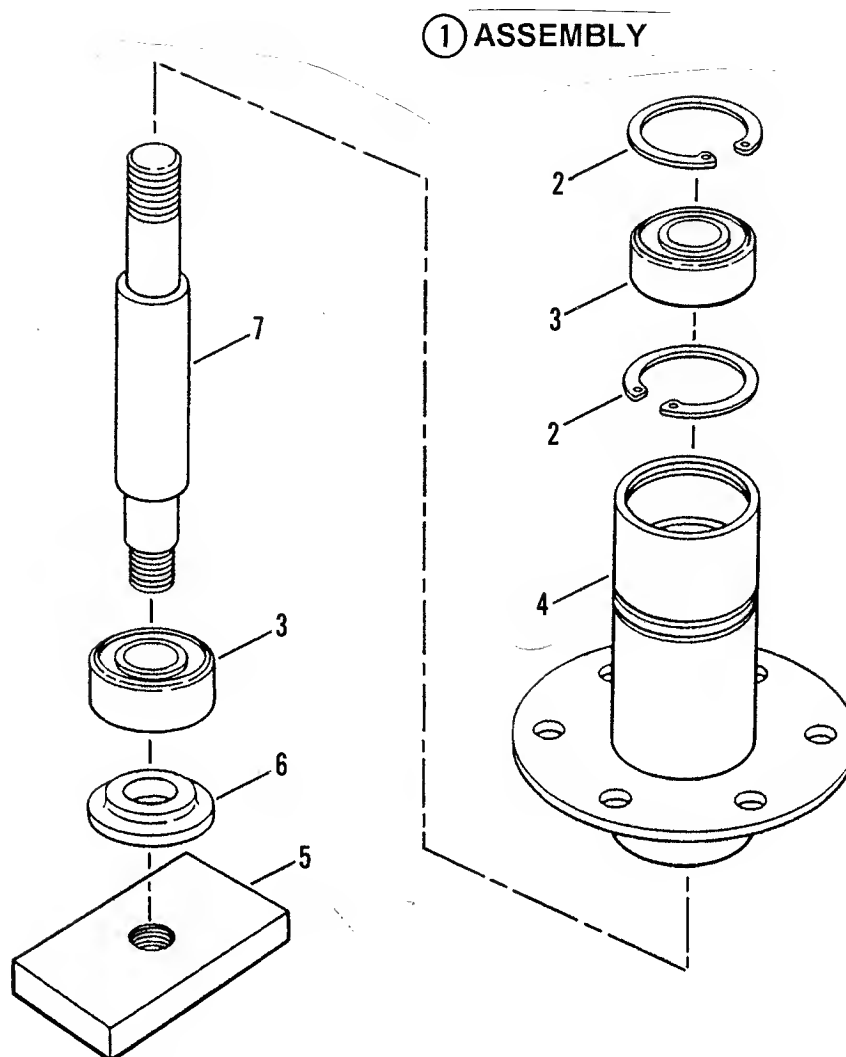

ITEM	PART NO.	DESCRIPTION
1	5-9723	ASSEMBLY, Spindle Housing, 42" Cutting Deck (Model LT155H42BBV) (Includes items 2 thru 7)
2	1-2491	RING, Retaining (2)
3	1-3313	BEARING, Spindle (2)
4	4-7917	HOUSING, Spindle
5	3-2294	HOLDER, Blade
6	1-4407	WASHER, Spindle
7	2-7668	SPINDLE

# ENGINE COMPONENTS

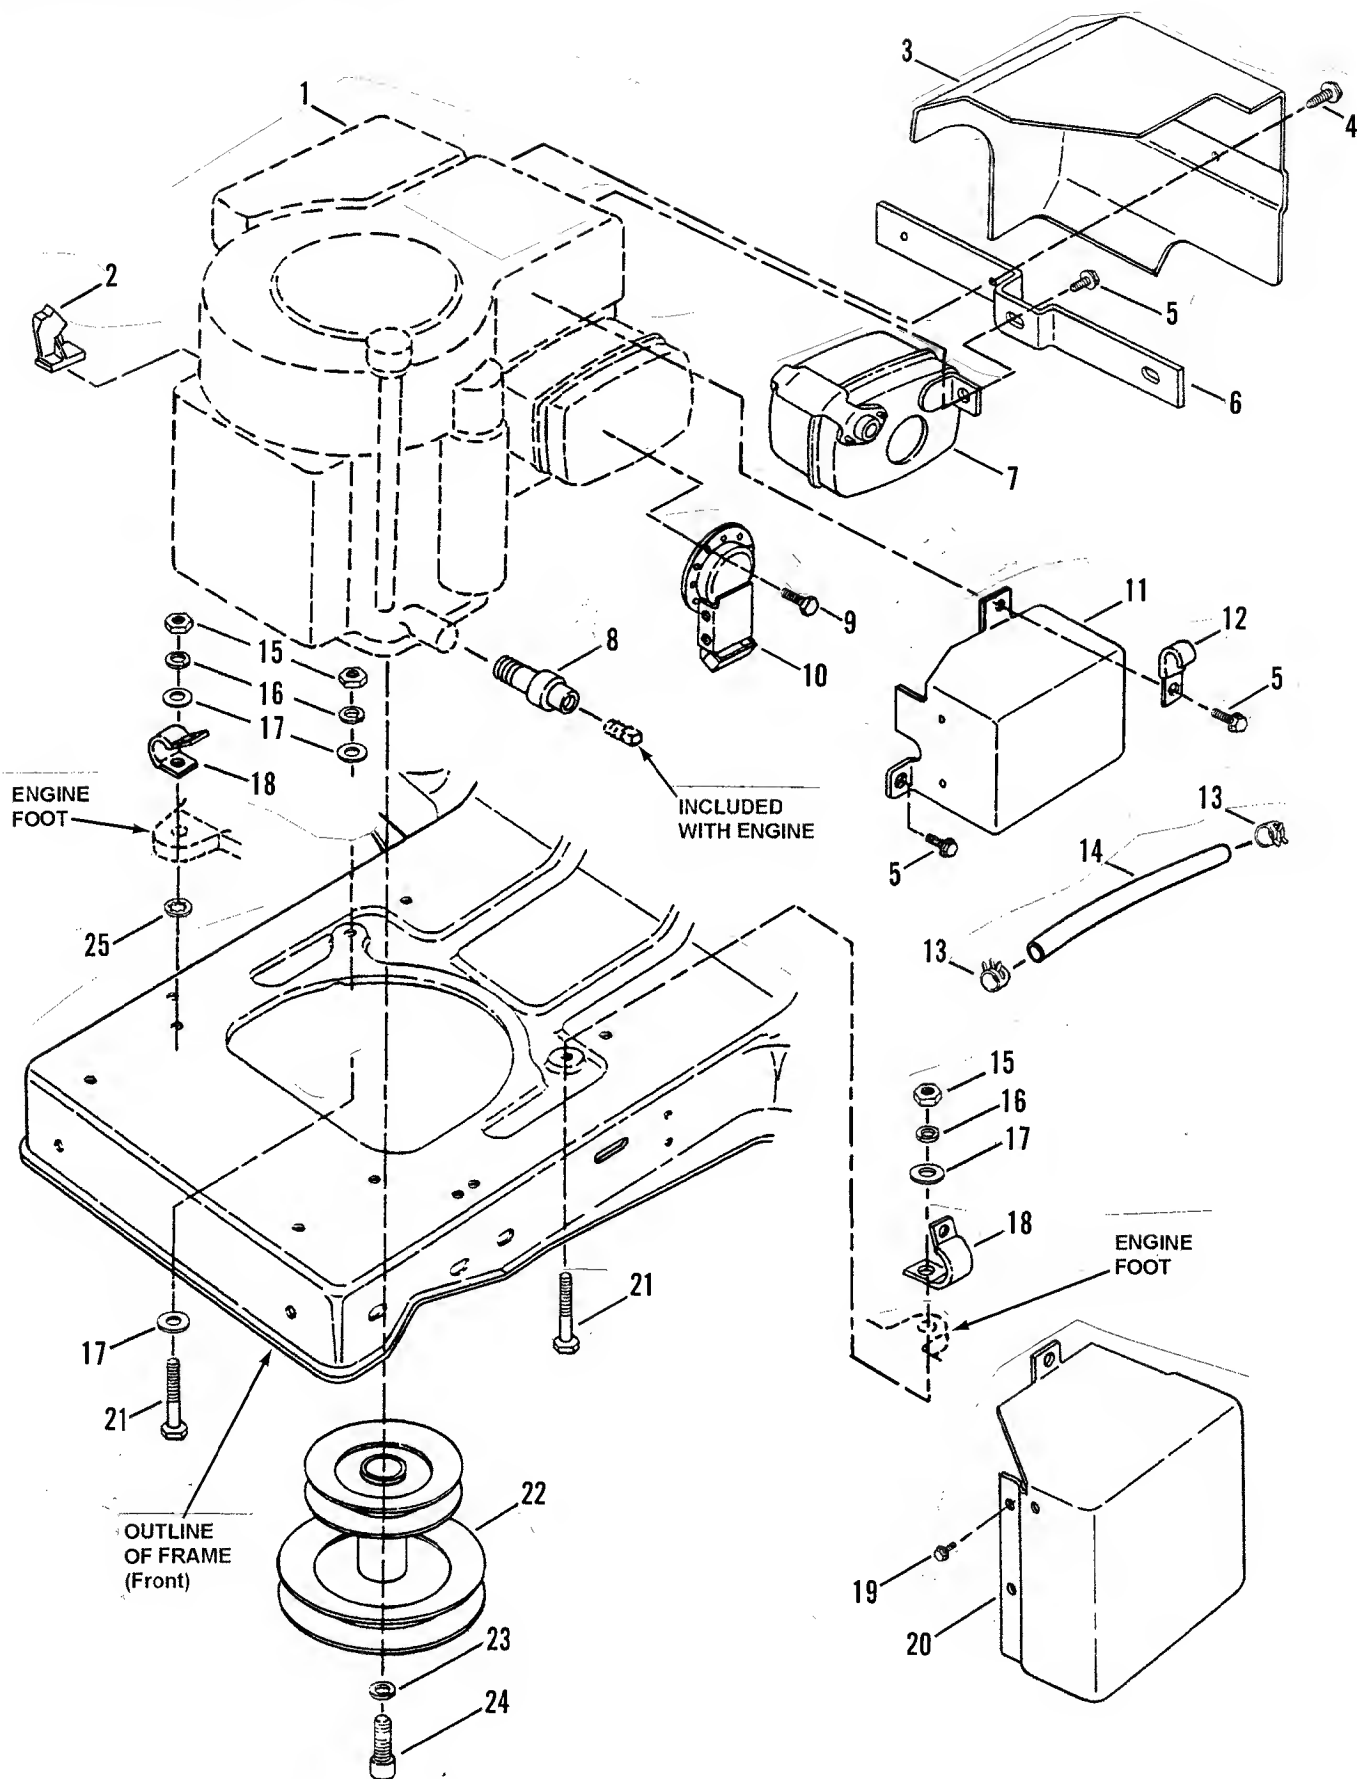


## ITEM PART NO. DESCRIPTION

1	**	ENGINE, B. & S. 12HP, Model 283707, Type 0134 (Model: LT120G30BB)
—	**	ENGINE, B. & S. 12.5HP I/C, 3100 RPM, Model 289707, Type 0117, Trim 01 (Model: LT125G33BB)
—	**	ENGINE, B. & S. 12.5HP I/C, 2900 RPM, Model 289707, Type 0120, Trim 01 (Model: ELT125G33BB)
—	**	ENGINE, B. & S. 14HP OHV, Model 287707, Type 0229 (Models: LT140H33BBV & ELT140H33BBV)
—	**	ENGINE, B. & S. 14HP OHV, Model 287707, Type 0119 (Model: LT140H38BBV)
—	**	ENGINE, B. & S. 15.5HP OHV, Model 28Q777, Type 0155, Trim 02 (Model: LT150H38BBV)
—	**	ENGINE, B. & S. 15.5HP OHV, Model 28Q777, Type 0155, Trim 01 (Model: LT155H42BBV)
2	2-5079	CLIP, Speed
3	1-7022	HEAT SHIELD (Models: LT120G30BB & LT125G33BB Only!)
4	9-0307	SCREW, #10-24 x 1/2" Hex Washer Head, Self-Tapping (2)
5	9-1579	BOLT, 1/4-20 x 1/2" Hex Flange Lock (3)
6	3-8374	BRACKET, Heat Shield (Gear Drive Models Only!)
7	5-2691	MUFFLER, Exhaust (Gear Drive Models Only!)
8	2-2486	EXTENSION, Oil Drain (Shown) (Gear Drive Models Only!)
—	2-7972	ASSEMBLY, Oil Valve (Not Shown) (Hydro Drive Models Only!)
9	9-1581	SCREW, #8-18 x 1/2" Hex Head, Self-Tapping (3)
10	4-1537	EXTENSION, Muffler (All Hydro Models & Gear Drive Model ELT125G33BB)
11	4-1269	HEAT SHIELD, Muffler (Shown) (Hydro Models Only!)
—	4-1680	HEAT SHIELD, Muffler (Not Shown) (Model: ELT125G33BB Only!)
12	2-6482	CLIP, "J" Type (Hydro Models Only!)
13	1-2222	CLAMP, Fuel Line (2)
14	2-3479	LINE, Fuel, 16" Long (Models: LT140H33BBV, ELT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV)
—	3-2015	LINE, Fuel, 7" Long (Models: LT120G30BB, LT125G33BB, & ELT125G33BB)
15	9-1511	NUT, 5/16-18 Hex (4)
16	9-1315	WASHER, 5/16 Split Lock (4)
17	9-1296	WASHER, 5/16 Flat (5)
18	1-5861	CLIP, Wiring Harness (2)
19	9-1075	SCREW, #10-24 x 5/8" Hex Washer Head, Self-Tapping (4)
20	4-1677	HEAT SHIELD, Muffler (Shown) (Models: ELT140H33BBV, LT140H33BBV, & LT140H38BBV Only!)
—	4-1679	HEAT SHIELD, Muffler (Not Shown) (Models: LT125G33BB & ELT125G33BB)
21	9-0669	SCREW, 5/16-18 x 1 3/4" Hex Head Cap (2)
22	2-7767	ASSEMBLY, Engine Pulley (Models: LT120G30BB, LT125G33BB, & ELT125G33BB)
—	2-8028	ASSEMBLY, Engine Pulley (Models: LT140H33BBV & ELT140H33BBV)
—	2-8033	ASSEMBLY, Engine Pulley (Models: LT140H38BBV, LT150H38BBV, & LT155H42BBV)
23	9-1301	WASHER, 7/16 Split Lock
24	9-1531	SCREW, 7/16-20 x 1" Hex Cap, Socket Head
25	9-0391	WASHER, 5/16 Internal Tooth Lock

**\*\*PURCHASE ENGINE & ENGINE PARTS,  
OTHER THAN THOSE LISTED, FROM  
ENGINE SERVICE OUTLETS.**


# ELECTRICAL - Brigg's & Stratton Engines

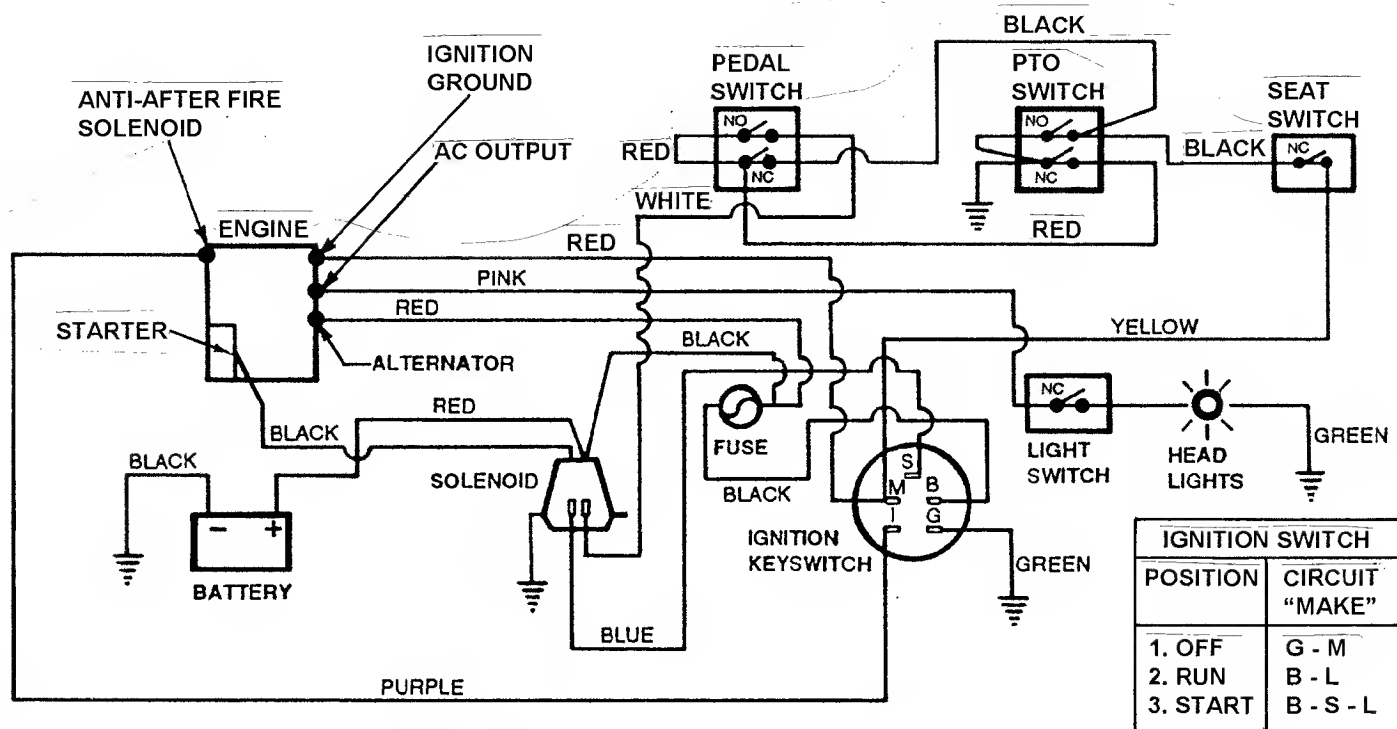


**SCHEMATIC - WIRING DIAGRAM P.N. 2-6616**

(MODELS: LT140H33BBV, ELT140H33BBV, LT14038BBV, LT150H38BBV, & LT155H42BBV)


## ILLUSTRATED DIAGRAM

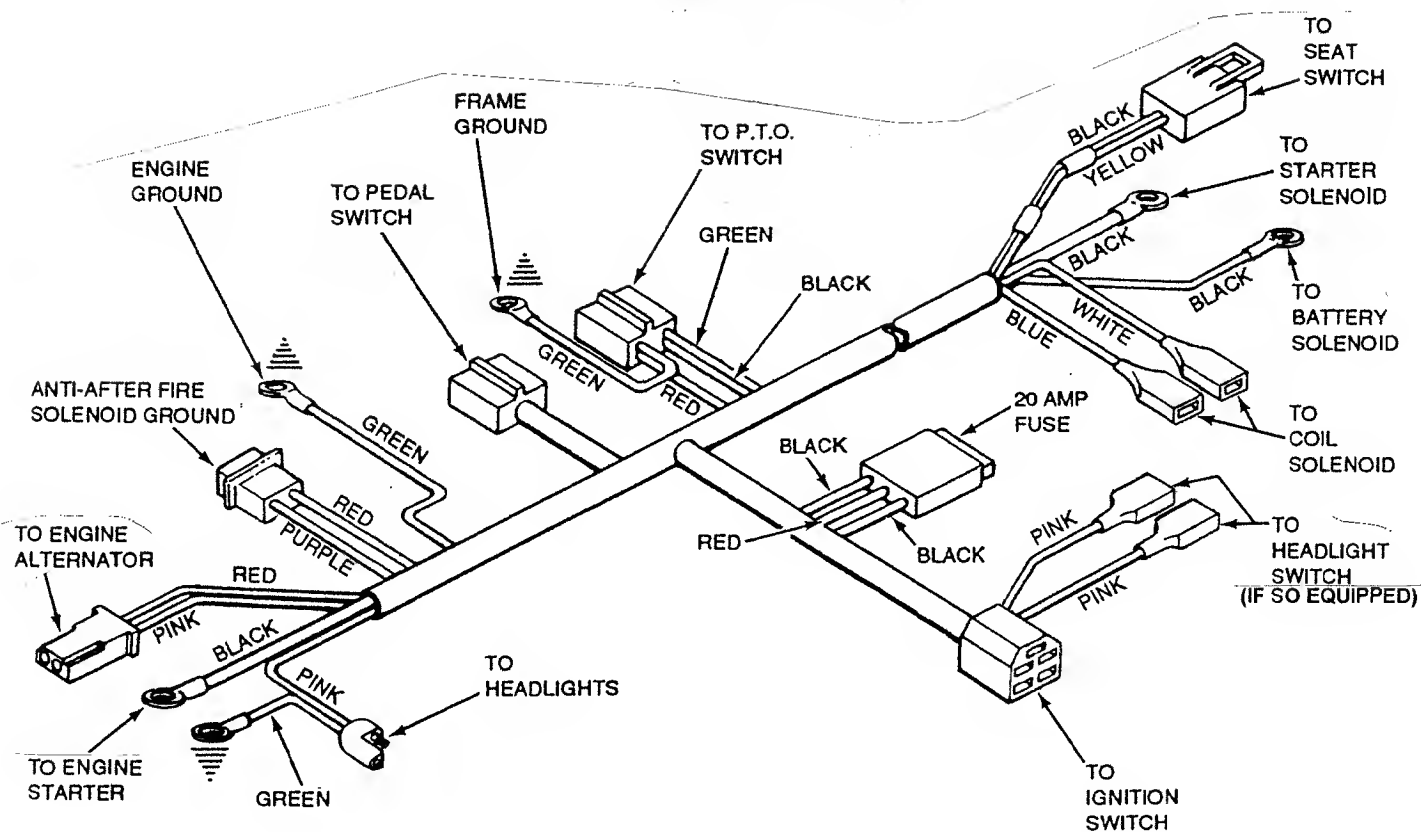

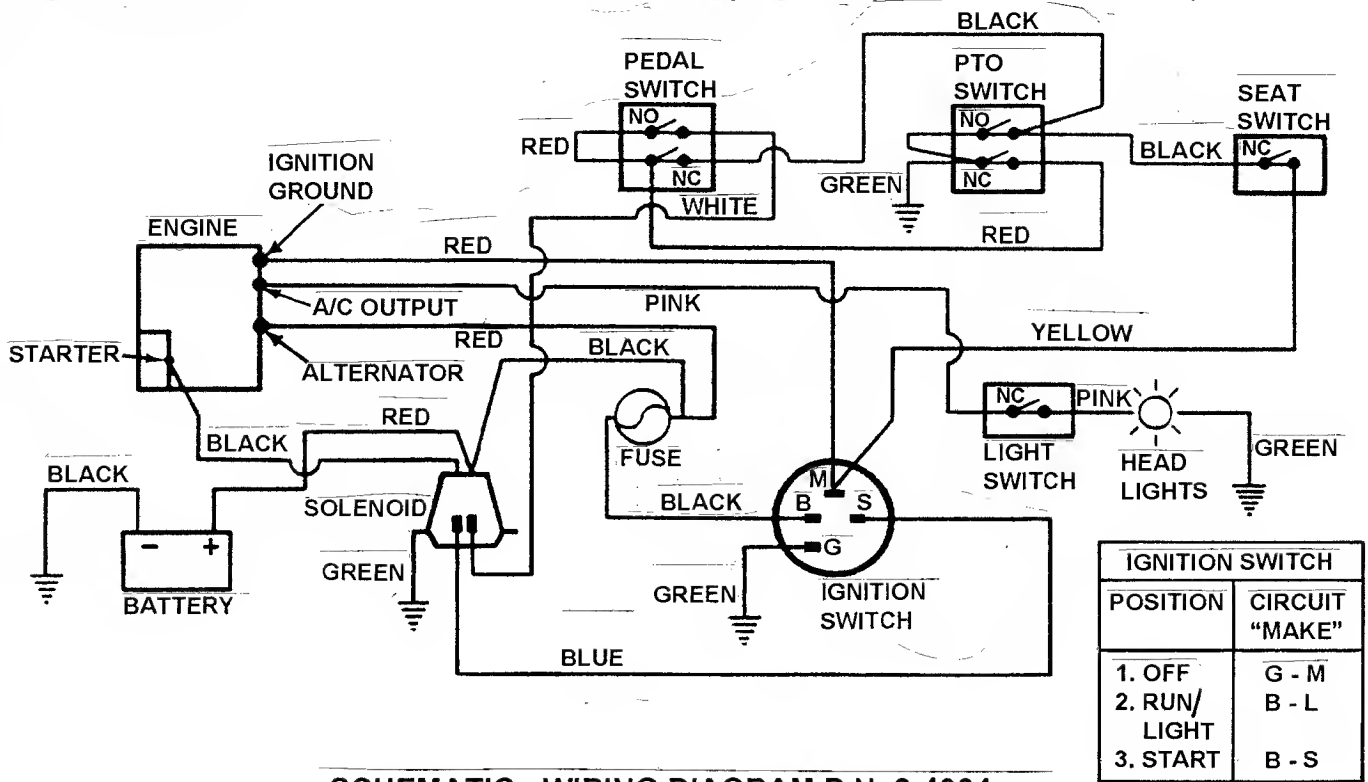

**SCHEMATIC - WIRING DIAGRAM P.N. 2-4364**  
(MODELS: LT120G30BB, LT125G33BB, & ELT125G33BB)

## ILLUSTRATED DIAGRAM

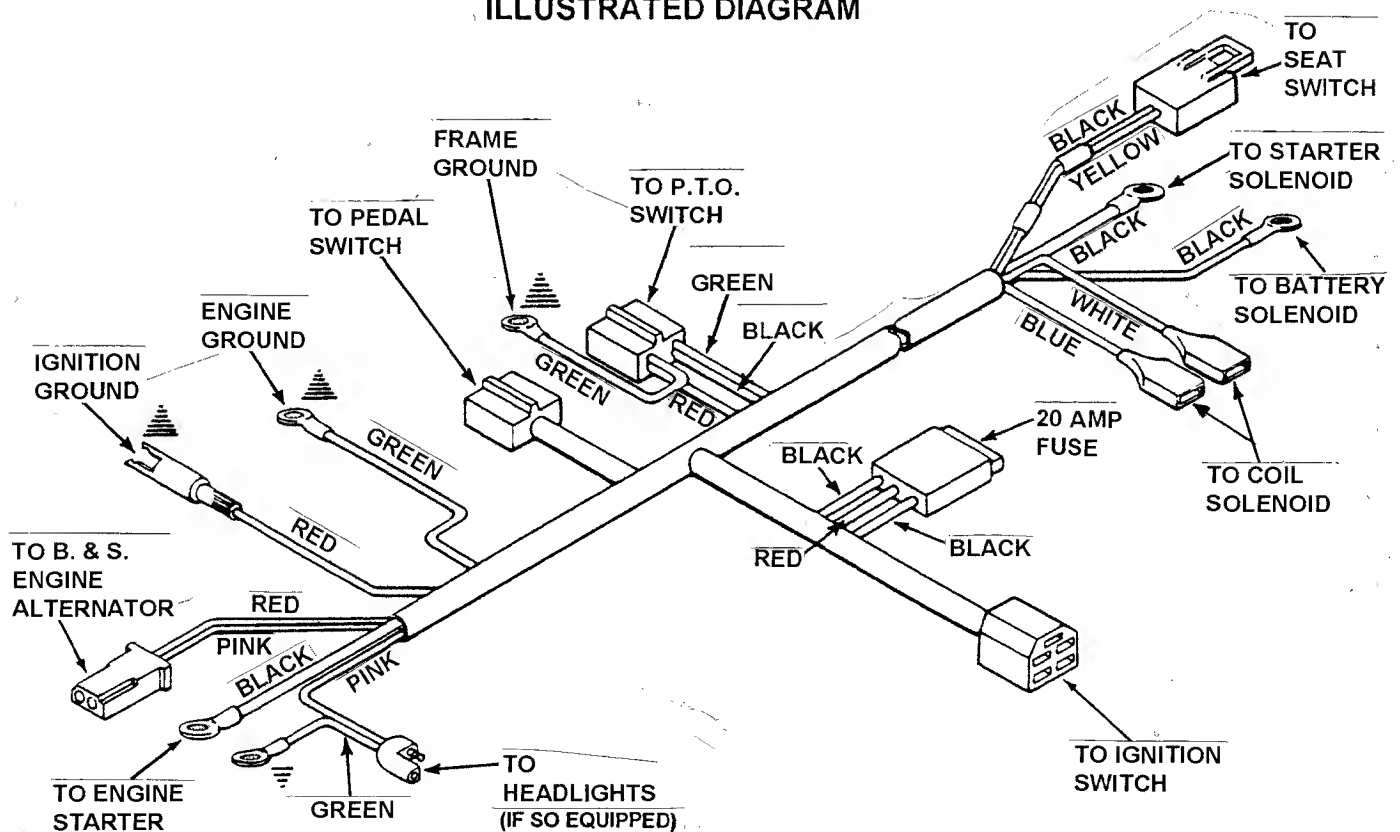

# NOTES

## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Parts Manual for

***SNAPPER***®

***GEAR & HYDRO DRIVE MODELS:***

***LT120G30BB, LT125G33BB, ELT125G33BB***

***LT140H33BBV, ELT140H33BBV***

***LT140H38BBV***

***LT150H38BBV***

***LT155H42BBV***

***SERIES "B"***

***LAWN***

***TRACTORS***

***SNAPPER***® McDonough, GA., 30253 U.S.A.